

SHARP®

MODEL

LC-70LE735X

LCD COLOUR TELEVISION

OPERATION MANUAL

AQUOS



LED

DOLBY®
DIGITAL

FULL HD 1080P

SRS®
TruSurround HD

HDMI

DLN+™
HD

DLNA®
CERTIFIED



DVB
Digital Video
Broadcasting

YouTube
VIDEOS



Dear SHARP customer

Thank you for your purchase of the SHARP LCD colour TV product. To ensure safety and many years of trouble-free operation of your product, please read **Important safety precautions** carefully before using this product.

Contents

Introduction.....	3	AQUOS LINK.....	27
Precautions For Daily Use	3	Controlling HDMI devices using AQUOS LINK.....	27
Important safety precautions.....	3	AQUOS LINK connection.....	28
Supplied accessories.....	5	Operating an AQUOS LINK device.....	28
Optional accessories	5	Basic adjustment.....	30
Preparation	6	Picture settings	30
Protection against overturning	6	Audio settings.....	32
Attaching the stand unit	7	Power save settings.....	33
Connecting the TV.....	8	Channel settings	34
Using the remote control unit.....	9	Digital setting	34
Inserting the batteries.....	9	Analogue setting	35
Angle of the remote control unit.....	9	Sort.....	35
Cautions regarding the remote control unit.....	9	Erase programme	35
Part names and functions.....	10	Useful viewing functions.....	36
TV (front/side view)	10	TV Start-up time setting.....	36
TV (rear view).....	10	Individual setting—password	36
Remote control unit	11	Individual setting—time	37
Quick guide	12	Individual setting—language	37
What is the HOME?	12	Optional features settings	38
Basic operation	12	Selecting the picture size manually	38
Initial auto installation	14	Selecting the WSS picture size automatically....	38
Checking signal strength and channel strength.....	14	Setting audio input	39
Watching TV	15	Skipping specified inputs.....	39
Daily operation.....	15	Selecting the HDMI picture size automatically...	40
Turning on/off the power—		Adjusting image position	41
using the TV.....	15	Additional features	41
Turning on/off the power—		Network function.....	42
using the remote control unit.....	15	Connecting to the network.....	42
Switching between digital and analogue		Specifications (Wireless LAN USB adapter).....	44
broadcasts.....	16	Optional accessories (Wireless LAN USB adapter) ...	44
Programme guide	16	Using AQUOS.NET	45
Programme information (DTV)	16	Clear browser setting.....	46
Selecting an external video source	16	About links.....	46
Switching the digital audio format.....	17	Other useful features	48
Switching the analogue audio format.....	17	Using a USB device.....	48
Teletext	18	Connecting a USB device	48
EPG.....	20	Selecting USB usage	48
Useful settings for using EPG	20	Time shift.....	49
Selecting a programme using EPG.....	21	USB media/Home network	52
Timer setup using EPG	23	Photo mode	53
Cancelling the timer setup	23	Music mode	54
Video connections	25	Video mode.....	55
HDMI connection	25	USB device compatibility	56
Component connection.....	25	Home network server compatibility	56
VIDEO connection	26		
Audio connections.....	26		
Speaker/amplifier connection	26		

Connecting a PC.....	57
Connecting a PC	57
Displaying a PC image on the screen.....	57
Selecting the picture size.....	57
Adjusting the PC image automatically.....	58
Adjusting the PC image manually	58
PC control of the TV	59
Command list.....	60
Appendix	61
Troubleshooting	61
Troubleshooting—digital broadcasting	61
Reset	62
Updating your TV via DVB-T	62
Getting information	63
Updating your TV via USB/Network	63
Information on the software licence for this product	64
Software licence.....	64
Specifications	65
Removing the stand.....	66
Mounting the TV on a wall.....	67
Dimensional drawings.....	68

This product qualifies for ENERGY STAR when “Home” is selected for “TV Location”.
Setting “TV Location” to “Home” allows the TV to achieve an energy-saving status for household use.

Introduction

Precautions For Daily Use

Observe the following items

Maintenance of the cabinet

- When cleaning the cabinet, use a soft cloth (made of cotton, floss, etc.) to clean gently.
- Do not use a dry or damp rag mixed with chemicals, as this could cause the ingredients of the cabinet body to deteriorate or crack.
- Be careful not to use an abrasive cloth for cleaning or clean with excessive force, as this could scratch the surface of the cabinet.
- If the cabinet is greatly soiled, clean with a soft cloth (made of cotton, floss, etc.) soaked with a small amount of diluted neutral detergent and wrung out, and then clean with a soft dry cloth.
- Solvents such as benzene or thinner could cause the cabinet to deteriorate, or make its coating come off. Therefore do not use such solvents to clean the cabinet.
- Because plasticizer is included in the plastics, deterioration or the coating peeling off could occur when the cabinet comes into contact with some substances. Therefore keep it away from volatile substances such as insecticide. In addition, do not let it come into contact with objects made of rubber, resin, etc. for a long time.

Maintenance of the LCD panel

- Before cleaning the LCD panel, be sure to turn off the TV set and unplug the power cord from the outlet.
- When cleaning the LCD panel, use a dry and soft cloth (made of cotton, floss, etc.) to clean the surface of the LCD panel gently. For protecting the LCD panel, do not clean with a dirty cloth, detergent, or a dry or damp rag mixed with chemicals, as this could cause peeling of the panel surface.
- Be careful not to clean with an abrasive cloth or with excessive force, as this could cause the panel surface to be scratched.
- If the LCD panel is greatly soiled, clean it gently with a soft cloth (made of cotton, floss, etc.) soaked with a small amount of water (Do not clean with excessive force, so as to avoid the scratch of the panel surface).
- If dust sticks on the surface of the LCD panel, clean the panel with a commercially available cleaning brush (anti-static brush).

Important safety precautions

Caring for the cabinet

- Use a soft cloth (cotton, flannel, etc.) and gently wipe the surface of the cabinet.
- Using a chemical cloth (wet/dry sheet type cloth, etc.) may deform the components of the main unit cabinet or cause cracking.
- Wiping with a hard cloth or using strong force may scratch the surface of the cabinet.
- If the cabinet is very dirty, wipe with a soft cloth (cotton, flannel, etc.) soaked in neutral detergent diluted with water and thoroughly wrung out, and then wipe with a soft dry cloth.
- The cabinet is primarily made of plastic. Avoid using benzene, thinner, and other solvents, as these may deform the cabinet and cause the paint to peel off.
- Do not apply insecticides or other volatile liquids.
- Also, do not allow the cabinet to remain in contact with rubber or vinyl products for a long period of time. Plasticizers inside the plastic may cause the cabinet to deform and cause the paint to peel off.

- When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.



Caring for the front panel

- Turn off the main power and unplug the AC cord from the wall outlet before handling.
- Gently wipe the surface of the front panel with a soft cloth (cotton, flannel, etc.).
- To protect the front panel, do not use a dirty cloth, liquid cleaners, or a chemical cloth (wet/dry sheet type cloth, etc.). This may damage the surface of the front panel.
- Wiping with a hard cloth or using strong force may scratch the surface of the front panel.
- Use a soft damp cloth to gently wipe the front panel when it is really dirty (It may scratch the surface of the front panel when wiped strongly).
- If the front panel is dusty, use an anti-static brush, which is commercially available, to clean it.



- Water and moisture—Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement.



Introduction

- Do not place vases or any other water-filled containers on this product. The water may spill onto the product causing fire or electric shock.



- Stand—Do not place the product on an unstable cart, stand, tripod or table. Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.



- Ventilation—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.



- In case the product is dropped and the cabinet is damaged, be sure to turn off the power of the product, and unplug the power cord. If you continue to use the product, it may cause fire or electric shock. Contact your dealer.



- Do not open the rear cover of the cabinet to reconstruct the circuits. There exists high voltage within the cabinet and it may cause electric shock and injury. If maintenance is required, contact your dealer.



- The LCD panel used in this product is made of glass. Therefore, it can break when the product is struck forcefully or with a sharp object. If the LCD panel is broken, be careful not to be injured by broken glass.



- Heat sources—Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).



 
- To prevent fire, never place any type of candle or naked flames on the top or near the TV set.




- To prevent fire or shock hazard, do not place the AC power cord under the TV set or other heavy items.



- Do not place heavy objects on this product or stand on it. Doing so could cause injury if the product overturns. Take special care near children and pets.



 
- Unplug the power cord before you move the TV set. If not unplugged beforehand, the power cord may become damaged and cause electric shock.



The LCD panel is a very high technology product with 2,073,600 pixels, giving you fine picture details. Due to the very large number of pixels, occasionally a few non-active pixels may appear on the screen as a fixed point of blue, green, red or yellow. This is within product specifications and does not constitute a fault.

Precautions when transporting the TV

 - When transporting the TV, never carry it by holding or otherwise putting pressure onto the display. Be sure to always carry the TV by two people holding it with two hands—one hand on each side of the TV.



If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

- Do not display a still picture for a long time, as this could cause an afterimage to remain.






- Install the product on the place where the AC cord can be unplugged easily from the AC outlet, or from the AC INPUT terminal on the rear of the product.

NOTE

- The above are pictures for reference only; the actual item might be different.

Introduction

Supplied accessories

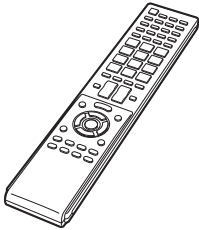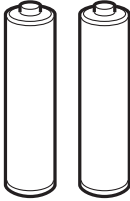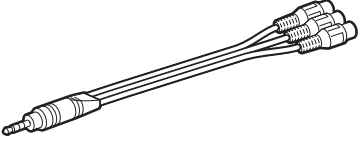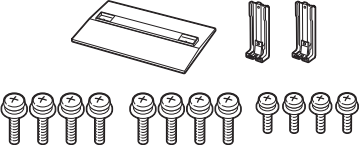Remote control unit (x 1)	“AAA” size battery (x 2)	AV cable (x 1)
 <p>Pages 9 and 11</p>	 <p>Page 9</p>	 <p>Page 26</p>
Stand unit	Operation manual	
 <p>Page 7</p>		

Optional accessories

The listed optional accessories are available for this LCD colour TV. Please purchase them at your nearest shop.

- Additional optional accessories may be available in the near future. When purchasing, please read the newest catalogue for compatibility and check the availability.

No.	Part name	Part number
1	Wall mount bracket	AN-52AG4
2	Wireless LAN USB adapter	KI-OUA004WJN1*1
		KI-OUA004WJN2*1
		KI-OUA004WJN3*1
		KI-OUA004WJN4*1

*1 Refer to page 44 for details on sales areas.

Preparation

 
Attaching the stand unit

- Before performing work, spread cushioning over the surface on which you will be laying the TV. This will prevent it from being damaged.


CAUTION

- **Attach the stand in the correct direction.**
- **Be sure to follow the instructions. Incorrect installation of the stand may result in the TV falling over.**


- 1 Confirm that there are twelve screws (eight long screws and four short screws) supplied with the stand unit.




- 2
 - ① Set the supporting post for the stand unit onto the polystyrene foam.
 - ② Attach the stand base to the supporting post.
 - ③ Insert and tighten the eight screws into the eight holes on the bottom of the stand base.
 - Hold the stand unit securely with one hand, and then tighten the screws.

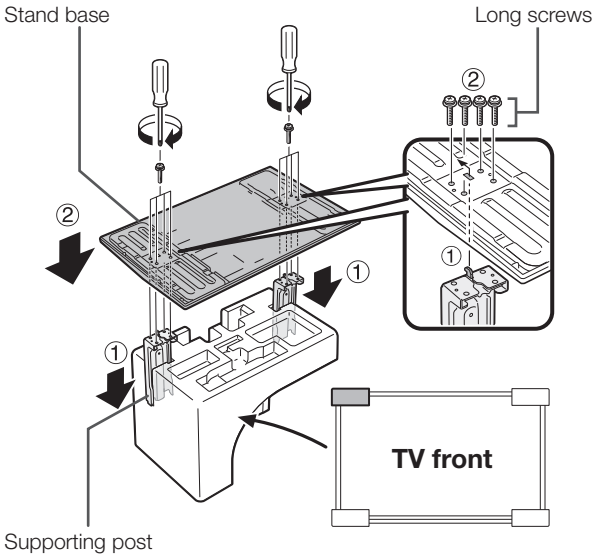

- 3 Insert the stand into the openings on the bottom of the TV (hold the stand so it will not drop from the edge of the base area).
 - Make sure that the stand is firmly inserted into the TV. Improper installation may result in tilting of the TV set.

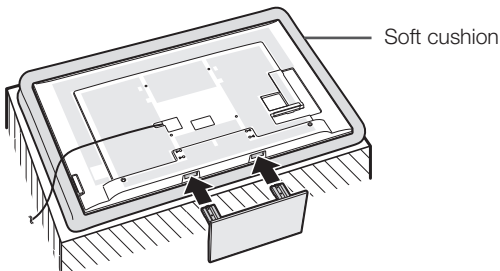


- 4 Insert and tighten the four screws into the four holes on the rear of the TV.

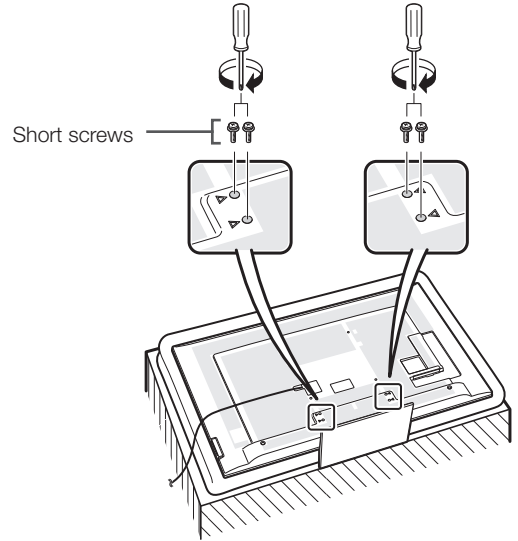

NOTE

- To detach the stand unit, perform the steps in reverse order.
- A screwdriver is not supplied with this product.
- In the installation procedure, be careful not to catch your fingers between the TV set and the floor.

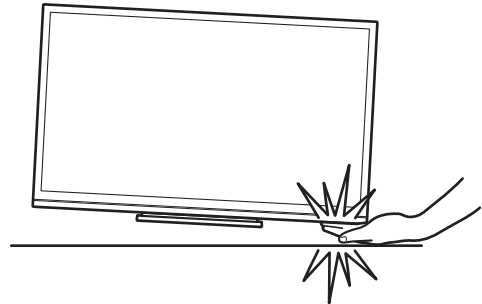


Preparation

Connecting the TV

Notes on installing the TV

- Avoid direct sunlight and place the TV in a well-ventilated location.
- Place the TV in a level location.
- Do not turn on the power of the TV before connecting the AC cord.

1 Connect the antenna cable.

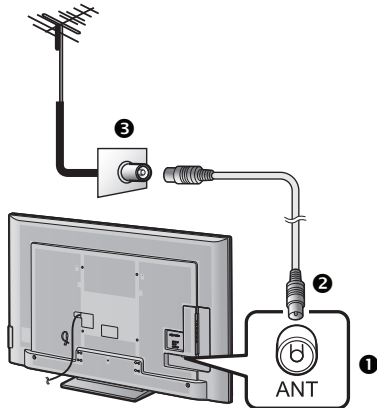


- ① Standard DIN45325 connector (IEC169-2)
- ② Antenna cable (75-ohm coaxial type: commercially available)
- ③ Room antenna terminal (75-ohm type)

2 Connect external devices.

See pages 24 to 26 for connecting external equipment, such as a VCR and DVD player.

3 Plug the AC cord in to the AC outlet (product shape varies in some countries).


TV (rear view)

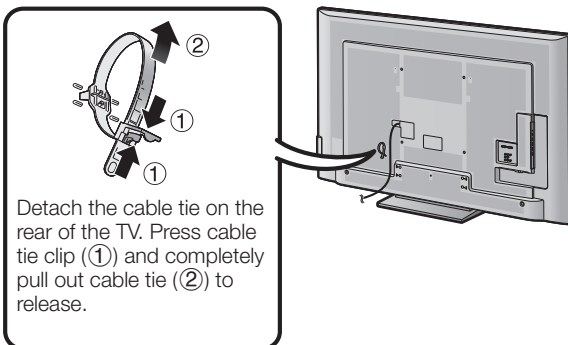

Detach the cable tie on the rear of the TV. Press cable tie clip (①) and completely pull out cable tie (②) to release.

- Place the TV close to the AC outlet, and keep the power plug within reach.
- Disconnect the AC cord from the AC outlet if the TV will not be used for a long period of time.

4 Bundle the cables.

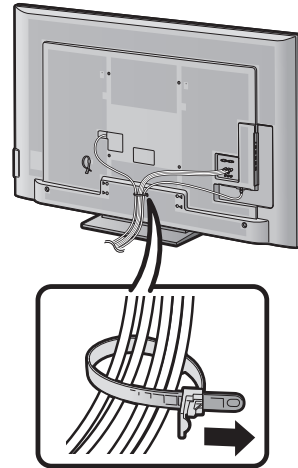

CAUTION
TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT TOUCH UN-INSULATED PARTS OF ANY CABLES WITH THE AC CORD CONNECTED.


Preparation

Using the remote control unit


Inserting the batteries

Before using the TV for the first time, insert two supplied “AAA” size batteries. When the batteries become depleted and the remote control unit fails to operate, replace the batteries with new “AAA” size batteries.


1 Open the battery cover.

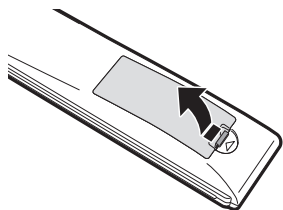

2 Insert the two supplied “AAA” size batteries.

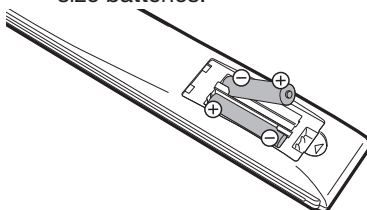

3 Close the battery cover.

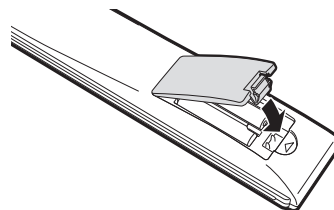

- Place batteries with their terminals corresponding to the (+) and (-) indications in the battery compartment.


CAUTION

Improper use of batteries can result in chemical leakage or explosion. Be sure to follow the instructions below.

- Do not mix batteries of different types. Different types of batteries have different characteristics.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries or cause chemical leakage in old batteries.
- Remove batteries as soon as they have worn out. Chemicals that leak from batteries can cause a rash. If you find any chemical leakage, wipe thoroughly with a cloth.
- The batteries supplied with this product may have a shorter life expectancy due to storage conditions.
- If you will not be using the remote control unit for an extended period of time, remove the batteries from it.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Angle of the remote control unit


Use the remote control unit by pointing it towards the remote control sensor. Objects between the remote control unit and sensor may prevent proper operation.

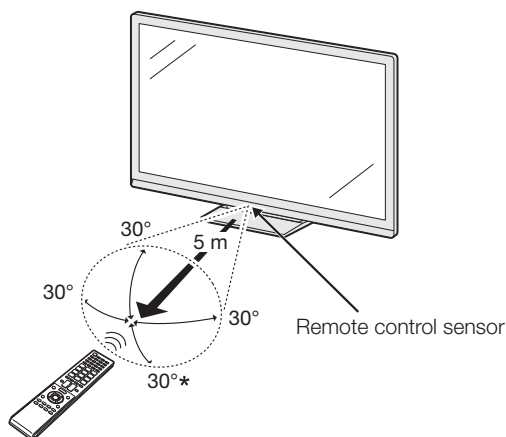

* When mounting the TV on the wall


Cautions regarding the remote control unit

- Do not expose the remote control unit to shock. In addition, do not soak the remote control unit to liquids, and do not place in an area with high humidity.
- Do not install or place the remote control unit under direct sunlight. The heat may cause deformation of the unit.
- The remote control unit may not work properly if the remote control sensor of the TV is under direct sunlight or strong lighting. In such cases, change the angle of the lighting or the TV, or operate the remote control unit closer to the remote control sensor.

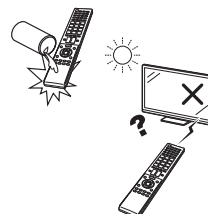


Part names and functions

TV (front/side view)

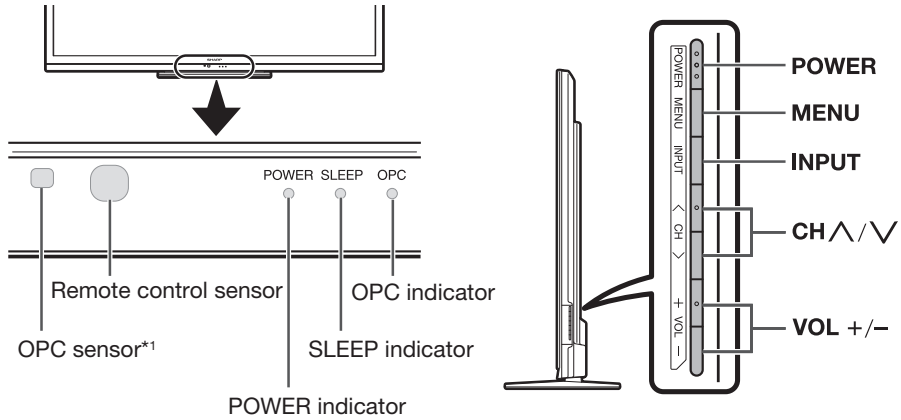

*1 OPC: Optical Picture Control (Page 30)

TV (rear view)

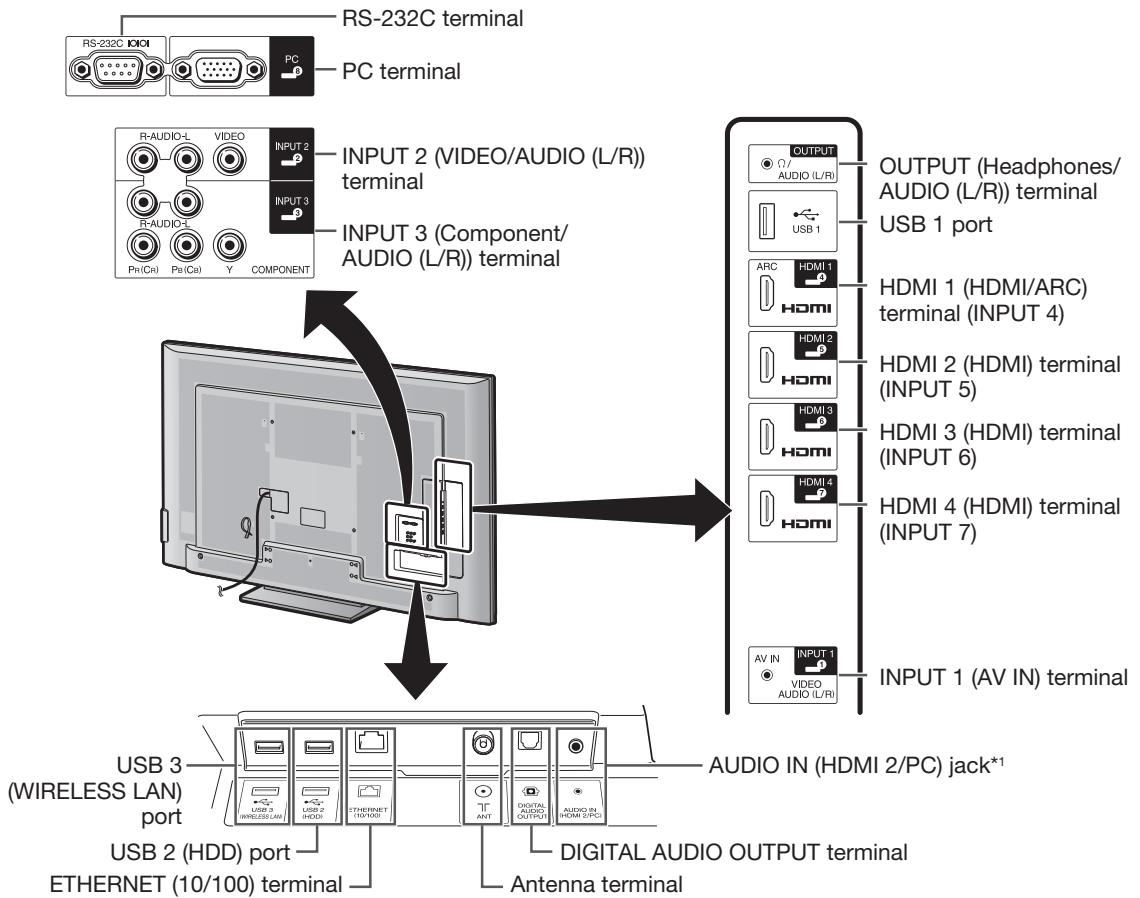


*1 The HDMI 2 and PC terminals can both use the same audio input terminal (AUDIO IN (HDMI 2/PC)). However, the proper item must be selected in the "Audio select" menu (refer to page 39 for details).

WARNING

- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Do not set the volume at a high level. Hearing experts advise against extended listening at high volume levels.

Remote control unit

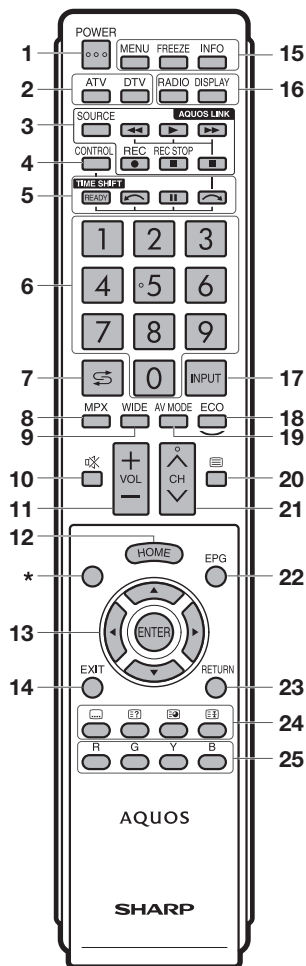

1 POWER (Standby/On)

To switch the power on and off (Page 15).

2 ATV (Analogue TV)

Press to access analogue TV mode (Page 16).

DTV (Digital TV)

Press to access digital TV mode (Page 16).

3 AQUOS LINK buttons

If external equipment such as a AQUOS BD player is connected via HDMI cables and is AQUOS LINK compatible, you can use these AQUOS LINK buttons. See pages 27 and 29 for details.

4 CONTROL

Press to display the panel to operate some functions on the screen.

5 TIME SHIFT (READY/⏮/⏭)

Press to temporarily record a programme you are watching if you want to interrupt a programme to answer a phone call, for example (Pages 49–51).

6 0–9

Set the channel (Page 15).

7 ↶ (Flashback)

Press to return to the previously selected channel or external input.

8 MPX

Select a sound multiplex mode (Page 17).

9 WIDE

Change a wide image mode (Pages 38, 56 and 57).

10 🔇 (Mute)

Mute the sound.

11 VOL +/-

Set the volume.

12 HOME

Display the “HOME” screen for enjoying Internet connection, Home network functions and to perform settings for the TV (Page 12).

13 ▲/▼/◀/▶ (Cursor)

Select a desired item on the setting screen.

ENTER

Execute a command.

14 EXIT

Turn off the On-Screen Display (Page 12).

15 MENU

Displays the menu screen (Page 12).

FREEZE

Freeze a motion picture on the screen.

INFO

DTV only: Display the programme information (Page 16).

16 RADIO

DTV only: Switch between radio and data mode.

When only data broadcasting (no radio broadcasting) is transmitted by DVB, the radio broadcasting will be skipped.

DISPLAY

Display the channel or input information.

Reveal/hide the guide display for USB media mode (Pages 53–55).

17 INPUT (INPUT SOURCE)

Select an input source (Pages 16, 25, 39, 40 and 57).

18 ECO

Select “Energy save” setting (Page 33).

19 AV MODE

Select audio/video settings (Page 30).

20 ☰ (Teletext)

Select the teletext mode (All TV image, all text image and TV/text image) (Page 18).

21 CH ▲/▼

TV input mode: Select the channel (Page 15).

AQUOS.NET: Select the page (Page 45).

22 EPG

DTV only: To display EPG (Electronic Programme Guide) screen (Pages 20–23).

23 RETURN

Menu mode: Return to the previous menu screen (Page 12).

24 Buttons for useful operations

☰ (Subtitle)

Switch subtitle languages on/off (Page 18).

☰ (Reveal hidden teletext)

Teletext mode: Display hidden characters (Page 18).

☰ (Subpage)

Display the teletext subpage directly (Page 18).

☰ (Hold)

Teletext mode: Stop updating teletext pages automatically. Press ☰ again to release the hold mode (Page 18).

25 R/G/Y/B (Colour) buttons

The coloured buttons are correspondingly used to select the coloured items on the screen (e.g., AQUOS LINK, USB media, Home network, teletext).

* This button does not work on this model.

Quick guide

What is the HOME?


You can easily launch to enjoy Internet connection and Home network functions and to perform settings for the TV from this "HOME" screen.

Basic operation

1

Display the HOME screen

Press **HOME** and the "HOME" screen displays.

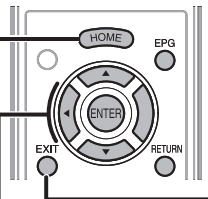

3

Exit the HOME screen

The operation will exit the "HOME" screen if you press **EXIT** before it is completed.

2

Select an item

Selecting in the HOME.

Press **▲/▼/◀/▶** to select the desired service or menu, and then press **ENTER**.

1 **YouTube™**

You can enjoy YouTube on your AQUOS (Page 45).

2 **AQUOS.NET**

You can connect to the internet through AQUOS.NET (Page 45).

3 **Home network** (Page 52)

4 **USB media** (Page 52)

5 **TV Menu**

Call up the OSD (On-screen Display) to perform settings for the TV. The OSD (On-screen Display) for the settings is called "TV Menu". The "TV Menu" enables various settings and adjustments.

NOTE

You can call up "TV Menu" screen by pressing **MENU**.




6 **Input change**

7 **IP Control** (Page 59)

8 **Network setup** (Pages 42–43)

9 **Programme guide (CH list)** (Page 16)

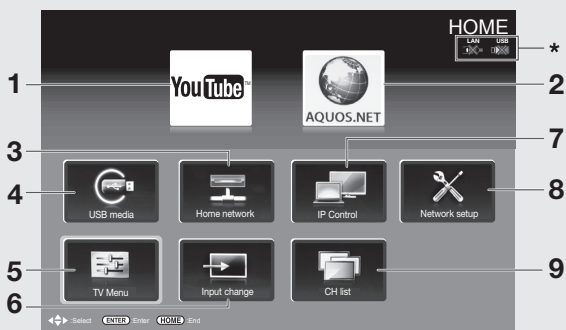

* When "a" is displayed, you cannot connect to USB devices.

If "a" is displayed, check your USB device's connection.

* When "b" is displayed, you cannot connect to your TV's network.

If "b" is displayed, check your TV's network settings and connection.

Regarding the instruction on the manual

On this manual, the following expression is often used in order to simplify instructions.


- Go to "HOME" > "TV Menu" > "Setup" > ...

This indicates how to navigate through the HOME screen using **▲/▼/◀/▶** and **ENTER** buttons.

Quick guide

Using software keyboard

Use the software keyboard when you need to input text.

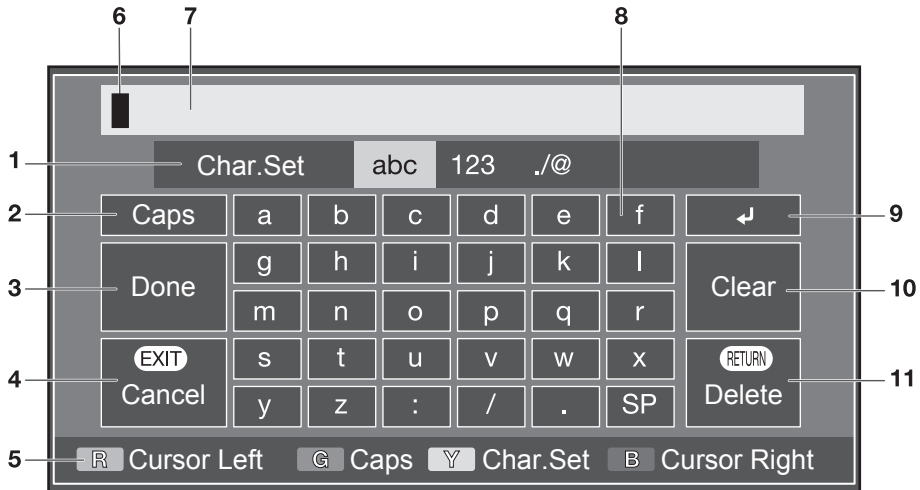

1 Char. Set

Changes character set into the alphabet, numbers, symbols, etc.

2 Caps

Changes characters to capital/lower case.

3 Done

Confirm the entry.

4 Cancel

Abort input and close the software keyboard.

5 R/G/Y/B (Colour) buttons

Selects the coloured items on the screen.

6 Input cursor

Press ◀▶ to move the cursor when highlighted.

7 Input field

The text you enter is displayed as you type it in.

8 Character

Input characters by using these buttons.

9 ↵

Put a line break.

10 Clear

Erases the character string.

- When the cursor is somewhere in a line: the character string to the right of the cursor will be erased.
- When the cursor is at the right end of a line: the entire line will be erased.

11 Delete

If the cursor is at the right end of a line, this erases text one character at a time.

- You can also delete text by pressing **RETURN** on the remote control unit.

NOTE

- Depending on the application, there may be a different software keyboard than the one indicated above.


Initial auto installation

When the TV is powered on for the first time after purchase, the initial auto installation wizard appears. Follow the menus and make the necessary settings one after another.

Confirm the following before turning on the power

- Is the antenna cable connected?
- Is the AC cord plugged in?

- 1 Press **POWER** on the TV.
 - The initial auto installation wizard appears.

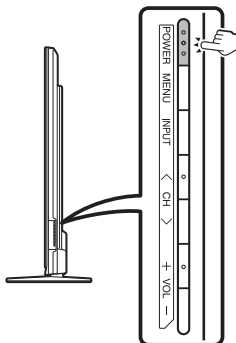

- 2 Setting the OSD language. Press **▲/▼** to select the desired language, and then press **ENTER**.

- 3 Selecting the location of the TV. Press **◀/▶** to select where you will use this TV, and then press **ENTER**.

HOME:

- Settings are optimised for normal home viewing and energy efficiency.
- “STANDARD” will be the default value for the “AV mode” setting.

STORE:

- Settings are designed for maximum impact in retail store displays.
- “DYNAMIC (Fixed)” will be the default value for the “AV mode” setting. If the “AV mode” is changed, the TV will automatically switch back to “DYNAMIC (Fixed)” when there is no operation using the TV or remote control unit for 30 minutes.
- The confirmation screen pops up only when selecting “STORE”. Press **◀/▶** to select “Yes” or “No”.

- * This product qualifies for ENERGY STAR in “HOME” mode default setting.
- * ENERGY STAR qualification is based on “STANDARD” in the “AV mode” menu.

NOTE

- STORE: A demonstration image will be displayed after initial auto installation is completed. If you have chosen “STORE” by mistake, go to “Setup” > “View setting” > “Reset” > select “HOME” again.

- 4 Setting the country. Press **▲/▼** to select your country or area, and then press **ENTER**.
 - This setting screen only appears during the initial auto installation.
- 5 Press **◀/▶** to select “Digital search” or “Analogue search”, and then press **ENTER**.
- 6 The TV searches for, sorts and stores all the receivable TV stations according to their settings and the connected antenna.
 - To abort the initial auto installation in progress, press **RETURN**.

NOTE

- If you turn off the power on the TV while performing a channel search in Step 5, the initial auto installation wizard may not appear. The auto installation function allows you to execute the installation again from “Setup” > “View setting” (Page 34).
- The initial auto installation wizard will abort if you leave the TV unattended for 30 minutes before searching for channels in Step 6.

Checking signal strength and channel strength

If you install a DTV antenna for the first time or relocate it, you should adjust the alignment of the antenna to receive a good reception while checking the antenna setup screen.

- 1 Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Channel settings” > “Antenna setup-DIGITAL”.

● Checking signal strength

- 2 Press **▲/▼** to select “Signal strength”, and then press **ENTER**.

Supply voltage	
Signal strength	
Channel strength	CH No. 21
	Signal strength
	Current 97 Max. 97
	Quality
	Current 99 Max. 99

● Checking channel strength

- 3 Press **▲/▼** to select “Channel strength”, and then press **ENTER**.
 - You can input a specified frequency band using the **0-9** numeric buttons.

Supply voltage	Frequency 4740 MHz
Signal strength	
Channel strength	CH No. 21
	Signal strength
	Current 97 Max. 97
	Quality
	Current 99 Max. 99

- 4 Position and align the antenna so that the maximum possible values for “Signal strength” and “Quality” are obtained.

NOTE

- The values of “Signal strength” and “Quality” indicate when to check the appropriate alignment of the antenna.

Supplying power to the antenna


You can supply power to the antenna in order to receive digitally/terrestrially broadcast stations after connecting the antenna cable to the antenna terminal on the rear of the TV.

- 1 Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Channel settings” > “Antenna setup-DIGITAL” > “Supply voltage”.
- 2 Press **◀/▶** to select “On”, and then press **ENTER**.

Watching TV

Daily operation


Turning on/off the power—using the TV

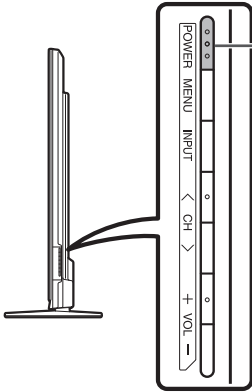

Turning on/off the power

- 1** Turn on the power.
Press **POWER** on the TV (after a few seconds, an image appears with sound).
 - Wait more than five seconds until you press **POWER** on the TV after inserting the power plug.
- 2** Turn off the power.
Switch it off by pressing **POWER** on the TV.

Turning on/off the power—using the remote control unit

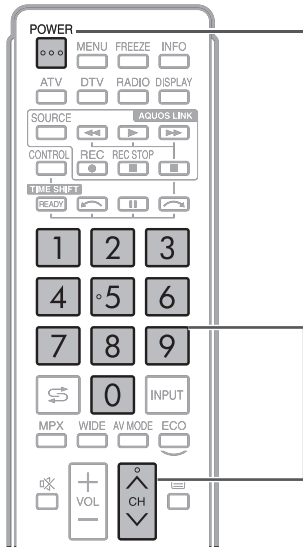

Standby mode

- 1** To standby mode
If the TV is turn on, you can switch it to standby by pressing **POWER** on the remote control unit.
- 2** Switch on from standby.
From standby, press **POWER** on the remote control unit.

NOTE

- If you are not going to use this TV for a long period of time, be sure to remove the AC cord from the AC outlet.
- A small amount of electric power is still consumed even when the TV is in standby mode.

Changing channels


- 1** Turn on the power.
- 2** Select a programme using **0-9** numeric buttons or **CH** \wedge / \vee on the remote control unit.

NOTE

- You can also select a programme using **CH** \wedge / \vee on the TV.

Operation without a remote control unit

You can operate the menu settings using the TV control buttons.

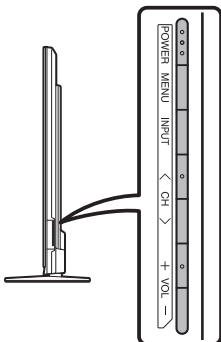


TV control buttons	Remote control buttons
MENU	MENU
INPUT	ENTER
CH \wedge / \vee	\blacktriangle / \blacktriangledown
VOL +/ VOL -	\blacktriangleright / \blacktriangleleft


Watching TV

Switching between digital and analogue broadcasts

Watching digital broadcasts

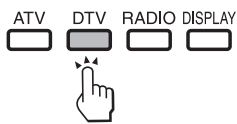


Watching analogue broadcasts

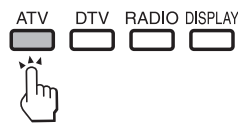


Programme guide

You can check the current schedule of DTV events and view detailed information about current events.

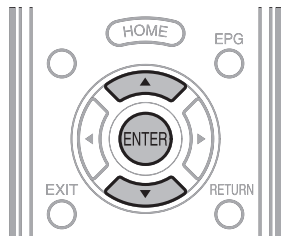


- 1 Press **ENTER** to display the programme guide list.
- 2 Press **▲/▼** to display your desired programme, and then press **ENTER**.
 - When you press **ENTER**, the TV jumps to the channel.

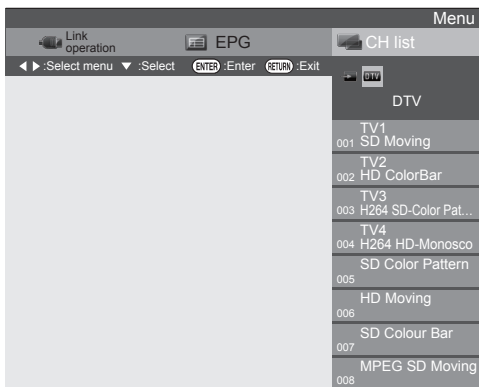

Programme information (DTV)




While watching DTV you can check the extended programme information on the screen using **INFO** on the remote control.

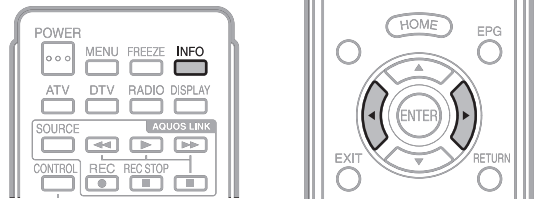

- If there is more information, pressing **◀/▶** allows you to go to the next page or return to the previous page.
 - You can cancel this info by pressing **INFO** again.
- **Using Info on the menu screen**
 Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Option for view" > "Programme info."

Selecting an external video source

Once the connection is made, press **INPUT** to display the "INPUT" screen, and then press **INPUT** or **▲/▼** to switch over to the appropriate external source with **ENTER**.

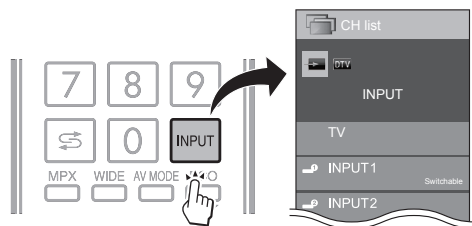

NOTE


- You can also select an external video source from "CH list" > "INPUT".
- Only inputs which are not set for "Input skip" (Page 39) and properly connected inputs can be selected.
- You can select an external video source for an HDMI connections as shown below.

Connected terminal	Selectable item
HDMI 1	INPUT 4
HDMI 2	INPUT 5
HDMI 3	INPUT 6
HDMI 4	INPUT 7

Watching TV

Switching the digital audio format

If multi sound modes are received, each time you press **MPX** the mode switches as follows.

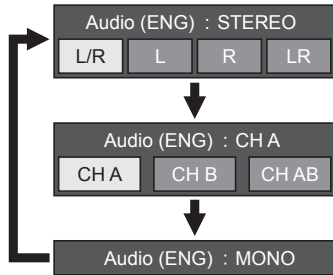

Press ◀/▶ to select L or R sound when the STEREO or DUAL MONO screen is displayed.




NOTE

- The sound mode screen disappears in six seconds.
- Selectable items vary depending on the received broadcasts.
- When the “Audio description setting” menu is set to “On”, the audio description sound is selected depending on the main audio.

Switching the analogue audio format


You can switch between multiple audio modes when watching a multiple audio or stereo broadcast programme.

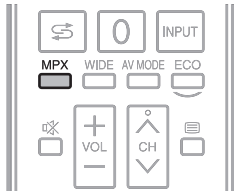

In the NICAM TV broadcasts

When receiving a stereo signal

Each time you press **MPX**, the mode switches between NICAM STEREO and MONO.

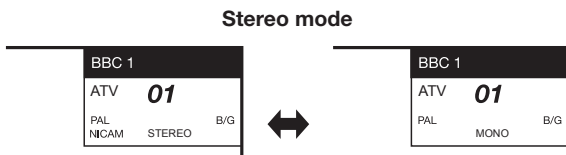

When receiving a bilingual signal

Each time you press **MPX**, the mode switches among NICAM CH A, NICAM CH B, NICAM CH AB and MONO.


Bilingual mode



When receiving a monaural signal

Each time you press **MPX**, the mode switches between NICAM MONO and MONO.

Monaural mode

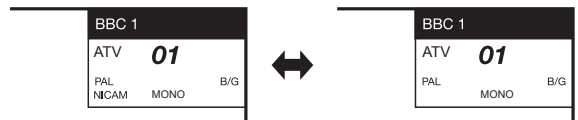

In the TV mode of A2 TV broadcasts

When receiving a stereo signal

Each time you press **MPX**, the mode switches between STEREO and MONO.


Stereo mode



When receiving a bilingual signal

Each time you press **MPX**, the mode switches among CH A, CH B and CH AB.


Bilingual mode

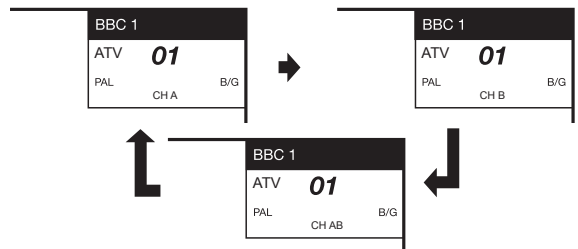

When receiving a monaural signal

When you press **MPX**, “MONO” displays.

 Monaural mode



NOTE



- “BBC1”, “01” and “PAL” are tentative network name, channel and colour system.

Teletext

What is teletext?

Teletext broadcasts pages of information and entertainment to specially equipped TV. Your TV receives teletext signals broadcast by a TV network, and decodes them into graphical format for viewing. News, weather and sports information, stock exchange prices and programme previews are among the many services available.

 



Turning teletext on/off

- 1 Select a TV channel or external source providing a teletext programme.
- 2 Press  to display the teletext.
- 3 Press  again to display the teletext on the right screen and the normal image on the left screen.
 - Many stations use the TOP operating system, while some use FLOF (e.g., CNN). Your TV supports both these systems. The pages are divided into topic groups and topics. After switching on the teletext, up to 2,000 pages are stored for fast access.
 - If you select a programme with no teletext signal, "No Teletext available" displays.
 - The same message displays during other modes if no teletext signal is available.



- Each time you press , the screen switches as shown above.

Buttons for teletext operations

Buttons	Description
CH^/V	Increase or decrease the page number.
Colour (R/G/Y/B)	Select a group or block of pages displayed in the coloured brackets at the bottom of the screen by pressing the corresponding colour (R/G/Y/B) on the remote control unit.
Numeric buttons 0-9	Directly select any page from 100 to 899 by using the 0-9 numeric buttons.
 (Reveal hidden teletext)	Reveal or hide hidden information such as an answer to a quiz.
 (Freeze/Hold)	Stop updating teletext pages automatically or release the hold mode.
 (Subtitle for teletext)	Display the subtitle or exit the subtitle screen. Subtitles will not be displayed when the service does not contain subtitle information.
 (Subpage)	Reveal or hide subpages. Selects directly the desired subpage (0-9). <ul style="list-style-type: none"> • Move to the previous subpage (R). • Move to the following subpage (G). • These two buttons are shown on the screen by the symbols "+" and "-".
ENTER	Display the top menu. <ul style="list-style-type: none"> • The top menu will not be displayed when the service does not support top menus.



View setting


Text language

If Teletext information does not display correctly, perform the procedure below.

Select from among six kinds of language tables: West Europe, East Europe, Greek/Turkish, Cyrillic, Arabic and Farsi.

Each table is compatible with the Teletext languages listed below.

- 1 Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Individual setting" > "Text language".

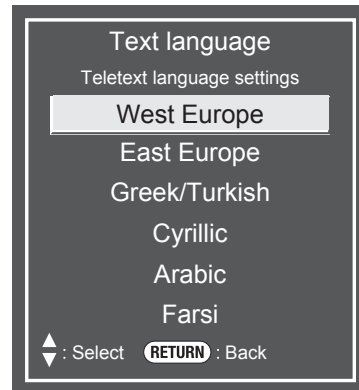

- West Europe—English, French, Scandinavian, Turkish, German, Spanish, Italian
- East Europe—Polish, French, Scandinavian, Czech, German, Slovenian/Croatian, Italian, Rumanian
- Greek/Turkish—English, French, Scandinavian, Turkish, German, Spanish, Italian, Greek
- Cyrillic—English, Russian, Estonian, Czech, German, Slovenian/Croatian, Ukrainian, Lettish
- Arabic—English, French, Scandinavian, Turkish, German, Hebrew, Italian, Arabic
- Farsi—English, French, Scandinavian, Turkish, German, Hebrew, Italian, Farsi


NOTE





- Teletext can display only when it is sent by a network. Not used to convert between languages.



View setting

Initial teletext page

If you set the language of the initial page (this page is displayed for the first time after pressing ) for teletext in DTV mode, it will start from the selected language page.

- 1 Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Individual setting” > “Initial teletext page”.
- 2 Press /// to select the desired language, and then press **ENTER**.

NOTE

- This function is available for teletext in DTV mode. This is not available for teletext in ATV or external input mode.
- If the initial teletext page of the selected language in this function is not included in a received broadcast, the default initial page will be displayed.



View setting

MHEG-5 (EPG)

This function is set to enable MHEG-5 in DTV mode.

Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Individual setting” > “MHEG-5 (EPG)” .

Item	
Enable	MHEG-5 is displayed during DTV mode.
Disable	MHEG-5 is not displayed during DTV mode.

NOTE

- This function is only displayed for models for the New Zealand market. This function is not displayed for models for the Singapore or Australia market.
- When the country setting is set to “New Zealand” in the initial auto installation, this function is available. When the country setting is set to countries other than “New Zealand”, this item is greyed out and cannot be selected.
- The MHEG-5 is not displayed when there is no MHEG-5 information on broadcast in setting this function to “Enable”.
- When this function is set to “Enable”, subtitles may not be displayed. If this occurs, set to “Disable” and then display of subtitles will be possible.

Watching TV

EPG

EPG is a programme list that is displayed on the screen. With the EPG, you can check the schedule of DTV/RADIO/DATA, view detailed information about them, tune to an event currently on-air.

Useful settings for using EPG

Basic setting



View setting

EPG

If you want to use the EPG for digital stations, select "Yes". The EPG data must be automatically captured while the TV is in standby mode. After setting to "Yes", it may take some time to turn off the power using the remote control unit or the TV due to the data capture process.

Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Individual setting" > "Standby search" > "EPG".

- Selecting EPG to "Yes" will result in higher power consumption*.
- Selecting EPG to "No" will save power consumption.

NOTE

- * Approximately 34 W for 15–30 minutes (depending on number of channels tuned) after power off from remote control.
- EPG data will not update if the TV is turned off from the power switch on the TV.
- "EPG" cannot be selected when the country setting is set to "New Zealand".

EPG display settings



Option

Display range setup

The "Display range setup" allows you to select three types of time spans for display on the screen.

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "EPG setup" > "Display range setup".

Item	
Mode 1 (Wide angle)	Displays six hours of programme information.
Mode 2 (Zoom)	Displays three hours of programme information.
Mode 3 (Vertical angle)	Changes to the EPG display format with a vertical time span.

NOTE

- "Display range setup" cannot be selected when the country setting is set to "New Zealand".



Option

Genre icon setup

You can grey out or place a mark on desired genres and smoothly search for programmes you frequently watch.

- 1 Go to "HOME" > "TV Menu" > "Setup" > "Option" > "EPG setup" > "Genre icon setup".
- 2 Press ▲/▼ to select the desired genre, and then press ENTER.

● Genre icon list

Genre icon list for Australia

Icon	Genre	Icon	Genre
	Movie		Current affairs
	News		Education/Information
	Entertainment		Infotainment
	Sport		Special
	Children's		Comedy
	Music		Drama
	Arts/Culture		Documentary

Genre icon list except Australia

Icon	Genre	Icon	Genre
	Movie/Drama		Music/Ballet/Dance
	News/Current affairs		Arts/Culture (without music)
	Show/Game show		Social/Political issues/Economics
	Sports		Education/Science/Factual topics
	Children's/Youth programmes		Leisure hobbies

- 3 Press ▲/▼ to select a level to pick out or search for programmes you want to watch ("Standard", "Light", "Remark").


Watching TV

Selecting a programme using EPG

Basic operation

● Display the EPG screen

Press **EPG**.

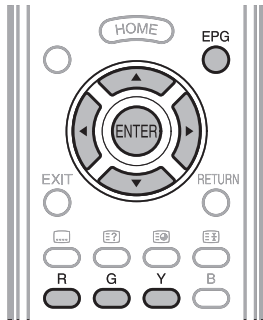

● Display the EPG screen

① Press ◀/▶ to select the time span you want to search.

- Continue to press ▶ to display programmes in the next time span.

② Press ▲/▼ to select the desired programme.

- If ▲ or ▼ are displayed on the left of the services, continue to press ▲/▼ to display next or previous screen.

● Close the EPG screen

Press **EPG** again.

NOTE

- You can also display the EPG screen from "HOME" > "TV Menu" > "EPG" > "EPG".
- The time displayed on the EPG is information sent by the TV station.
- When the country setting is set to "New Zealand", the EPG screen and operation differ due to the use of MHEG-5 EPG. The EPG screen and operation vary depending on the broadcasts.
- When the country setting is set to "New Zealand", the EPG function is not available when MHEG-5 EPG is not broadcasted.
- The MHEG-5 EPG function is not available for models for the Australia market.

Selecting a programme

③ Check programme information

- 1 Press ▲/▼/◀/▶ to select the programme you want to check.
- 2 Press **R**.

NOTE

- When the country setting is set to "New Zealand", this function is not available due to the use of MHEG-5 EPG.

Programme information




- 3 Press **ENTER** to tune to the selected programme.

Watching TV

④ Search a programme in a category

- 1 Press **G**.
- 2 Press **▲/▼** to select the desired genre, and then press **ENTER**.
- 3 Press **▲/▼** to select a programme you want to watch, and then press **ENTER**.

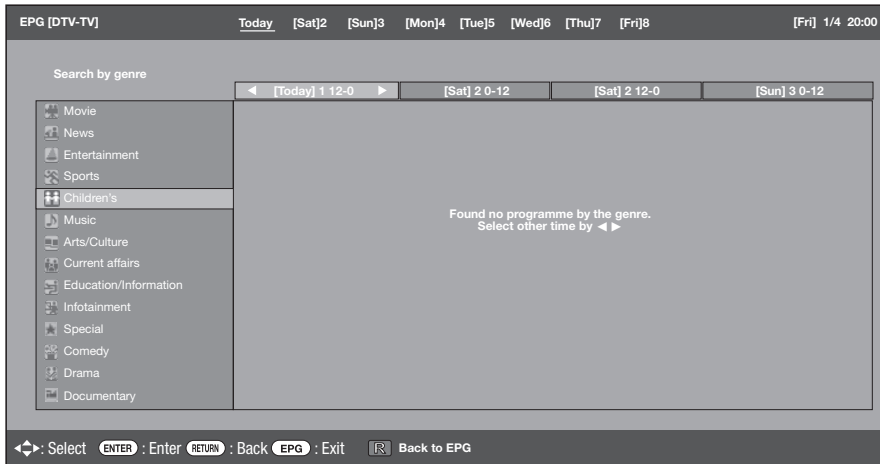

NOTE

- The genre information depends on the broadcasts.
- You can also display the EPG screen from “HOME” > “TV Menu” > “EPG” > “Search by genre”.
- When the country setting is set to “New Zealand”, this function is not available due to the use of MHEG-5 EPG.

⑤ Search for a programme by date/time

- 1 Press **Y**.
- 2 Press **◀/▶** to select the desired time span, and then press **ENTER**.



- 3 Press **▲/▼** to select the desired programme, and then press **ENTER**.

NOTE

- When you select a programme outside of the current time span, the timer setting screen displays (Page 23).
- You can also display the EPG screen from “HOME” > “TV Menu” > “EPG” > “Search by date”.
- When the country setting is set to “New Zealand”, this function is not available due to the use of MHEG-5 EPG.

⑥ Display the timer list for TV programmes


Press **B**.

- Refer to page 23 for the timer setup.

Timer setup using EPG

You can switch to a programme at a set time.

- 1 Press **EPG**.
- 2 Press **▲/▼/◀/▶** to select the programme you want to set, and then press **ENTER**.

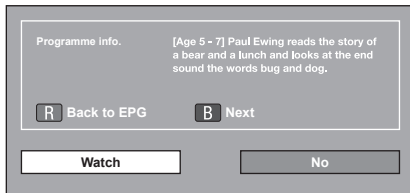

- 3 Press **◀/▶** to select "Watch", and then press **ENTER**.
 - If you select "No", the TV returns to the EPG screen.
- 4 Press **◀/▶** to select "Yes", and then press **ENTER**.
 - The selected TV programme is marked with an icon.
- 5 Press **ENTER** to select "Back".



 











Cancelling the timer setup

- 1 Press **EPG**.
 - 2 Press **▲/▼/◀/▶** to select the programme with timer setup, and then press **ENTER**.
 - 3 Press **◀/▶** to select "Cancel", and then press **ENTER**.
 - 4 Press **◀/▶** to select "Yes", and then press **ENTER**.
- **Cancelling using B button on the remote control unit**
- 1 Press **EPG**.
 - 2 Press **B** to display the timer setup list.
 - 3 Press **▲/▼** to select the programme you want to cancel timer setup, and then press **ENTER**.
 - 4 Press **◀/▶** to select "Cancel", and then press **ENTER**.
 - 5 Press **◀/▶** to select "Yes", and then press **ENTER**.

Connecting external devices

● Before connecting ...

- Be sure to turn off the TV and any devices before making any connections.
- Firmly connect a cable to a terminal or terminals.
- Carefully read the operation manual of each external device for possible connection types. This also helps you get the best possible audiovisual quality to maximise the potential of the TV and the connected device.
- Refer to page 57 for connecting a PC to the TV.

Connection cable (Connection code)	Image quality/ Audio quality	Connectable devices	Reference page
HDMI cable 	Excellent in both image quality and audio quality	 Reproduction devices such as a DVD player	25
DVI/HDMI cable/3.5 mm stereo minijack cable 	Good image quality	 Game console	
Component cable  Audio cable 	Average in both image quality and audio quality	 Reproduction devices such as a DVD player	25
AV cable (Supplied)  AV cable 	Average in both image quality and audio quality	 Reproduction devices such as a DVD player  Game console	26
Optical audio cable 	Excellent in audio quality	 Audio equipment	26
Stereo conversion cable 	Average in audio quality		

Connecting external devices


Video connections

HDMI connection

Example of connectable devices

- DVD player/recorder
- Blu-ray player/recorder
- Game console

The HDMI connections permit digital video and audio transmission via a connection cable from a player/recorder. The digital picture and sound data are transmitted without data compression and therefore lose none of their quality. Analogue/digital conversion is no longer necessary in the connected devices, which also would result in quality losses.

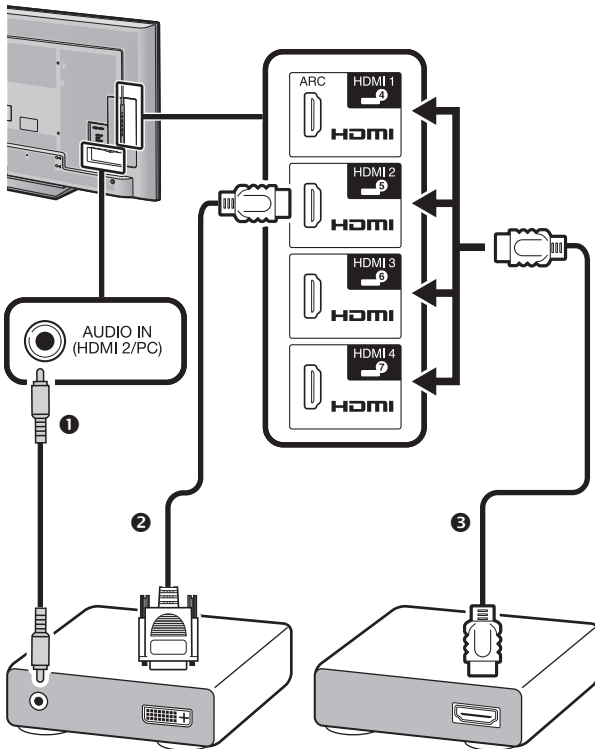

- 1 ø 3.5 mm stereo minijack cable (commercially available)
- 2 DVI/HDMI cable (commercially available)
- 3 HDMI-certified cable (commercially available)

DVI/HDMI conversion

Using a DVI/HDMI cable, the digital video signals of a DVD can also be played via the compatible HDMI connection. The sound must be fed in additionally.

- When connecting a DVI/HDMI cable to the HDMI terminal, the image may not come in clearly.
- Both HDMI and DVI use the same HDCP copy protection method.

When using the HDMI 2 terminal

You must set the audio signal input source depending on the type of HDMI cable connected (refer to page 39 for details).

HDMI-certified cable

- 1 Press **INPUT** to select “HDMI2” from the “INPUT” menu, and then press **ENTER**.
- 2 Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Terminal setting” > “Audio select” > select “HDMI (Digital)”.

DVI/HDMI cable

- 1 Press **INPUT** to select “HDMI2” from the “INPUT” menu, and then press **ENTER**.
- 2 Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Terminal setting” > “Audio select” > select “HDMI + Analogue”.

NOTE

- If a connected HDMI device is **AQUOS LINK compatible**, you can take advantage of versatile functions (Pages 27–29).
- Video noise may occur depending on the type of HDMI cable used. Make sure to use a certified HDMI cable.
- When playing the HDMI image, the best possible format for the picture will be detected and set automatically.
- An ARC (Audio Return Channel) compatible audio receiver must be connected to the HDMI 1 terminal with an ARC-compatible cable.

Supported video signal

576i, 576p, 480i, 480p, 1080i, 720p, 1080p
See page 58 for PC signal compatibility.




Component connection

Example of connectable devices

- VCR
- DVD player/recorder

You will enjoy accurate colour reproduction and high quality images through the INPUT 3 terminal when connecting a DVD player/recorder or other device.

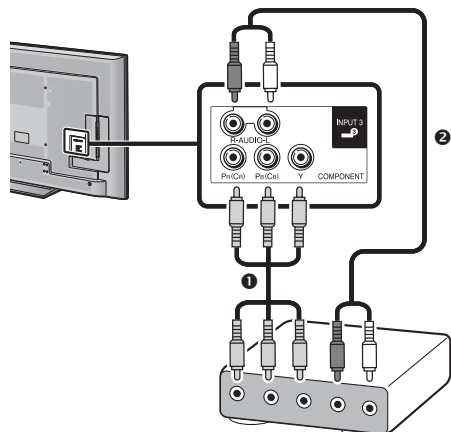

- 1 Component cable (commercially available)
- 2 Audio cable (commercially available)

Connecting external devices




VIDEO connection

Example of connectable devices

- VCR
- DVD player/recorder
- Game console
- Camcorder

You can use the INPUT 1 or INPUT 2 terminal when connecting to a game console, camcorder, a DVD player/recorder or other device.

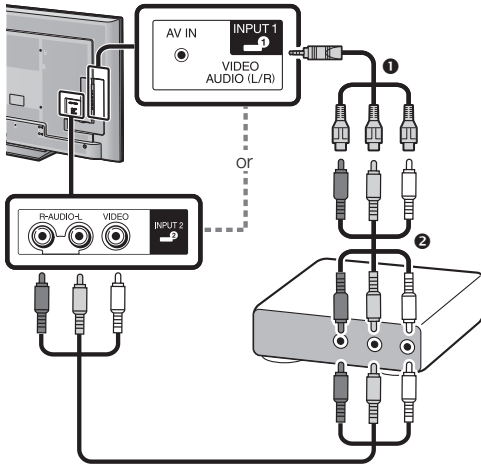


- ① AV cable (supplied accessory)
- ② AV cable (commercially available)

Audio connections

Speaker/amplifier connection

Connect an amplifier with external speakers as shown below.

● Connecting an amplifier with digital/analogue audio inputs

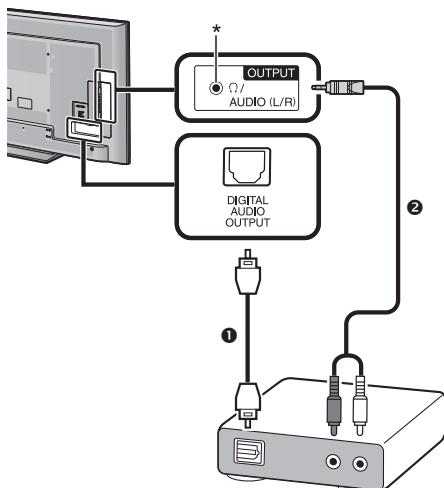

- ① Optical audio cable (for digital audio) (commercially available)
- ② Stereo conversion cable (for analogue audio) (commercially available)

* This terminal is also used for headphones. Reduce the volume before using headphones. Overwhelming sound may damage your hearing.

NOTE

- Optical digital audio will be output in 2-ch stereo when it is from the external equipment connected to the TV using an HDMI cable.
- If the image is not in sync with the audio, check the settings of the connected surround system.

● After connecting

Digital audio output setting

After connecting an amplifier with digital audio input and external speakers as shown, you should set an audio output format compatible with the programme you are watching or the device connected.


Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Terminal setting" > "Digital audio output" > select "PCM" or "Dolby Digital".

NOTE

- When set to "Dolby Digital", Dolby Digital is output when the Dolby Digital or Dolby Digital Plus audio formats are received. When set to "PCM", PCM is output no matter what audio formats are received.
- When set to "Dolby Digital", HE-AAC audio formats can be output as Dolby Digital.

NOTICE

When connecting an optical audio cable to the DIGITAL AUDIO OUTPUT terminal, check the direction carefully, and insert it straight in while aligning the bottom side. Forcing it could cause damage to the terminal.

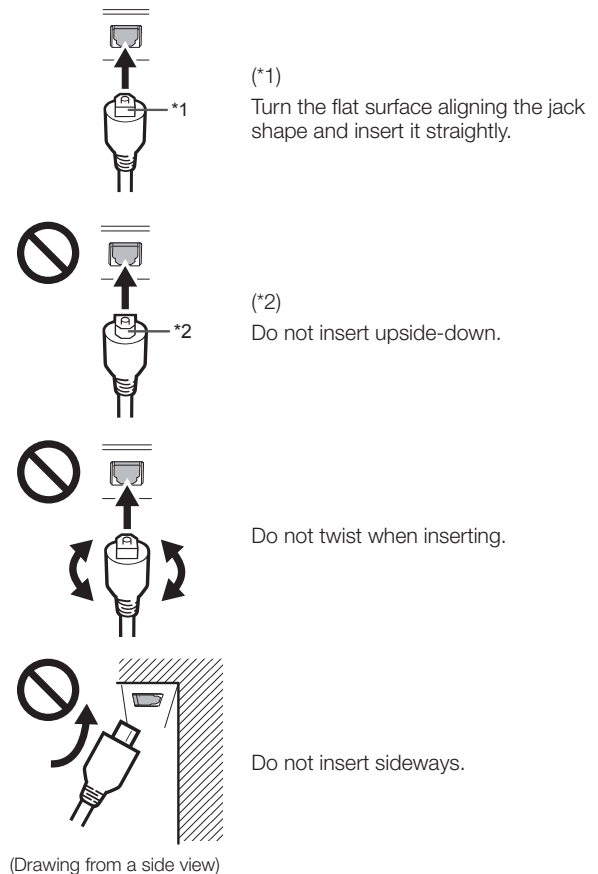

Controlling HDMI devices using AQUOS LINK

● What is AQUOS LINK?

Using the HDMI CEC protocol, with AQUOS LINK you can interactively operate compatible system devices (AV amplifier, DVD player/recorder, Blu-ray player/recorder) using a single remote control unit. By connecting AQUOS LINK-compatible devices with HDMI-certified cables to the TV, you can control a recorder or AV amplifier using the remote control of the TV.

NOTE

- Check the availability of AQUOS LINK-compatible AQUOS BD Players and AQUOS LINK-compatible audio systems in your country.
- AQUOS LINK does not work while using time shift functions.

● What you can do with AQUOS LINK

✓ One touch play

When the TV is in standby mode, it will automatically turn on and play back the image from the HDMI source.

✓ Operating title list of external devices


You can also call up the external player's top menu or AQUOS BD player's/AQUOS recorder's title list provided that the devices support AQUOS LINK.

✓ Controlling the AQUOS LINK-compatible audio system

You can adjust the volume and select the sound mode of the AQUOS LINK-compatible audio system.

✓ Multiple control of HDMI devices

You can select which HDMI device to operate using the "Link operation" menu.

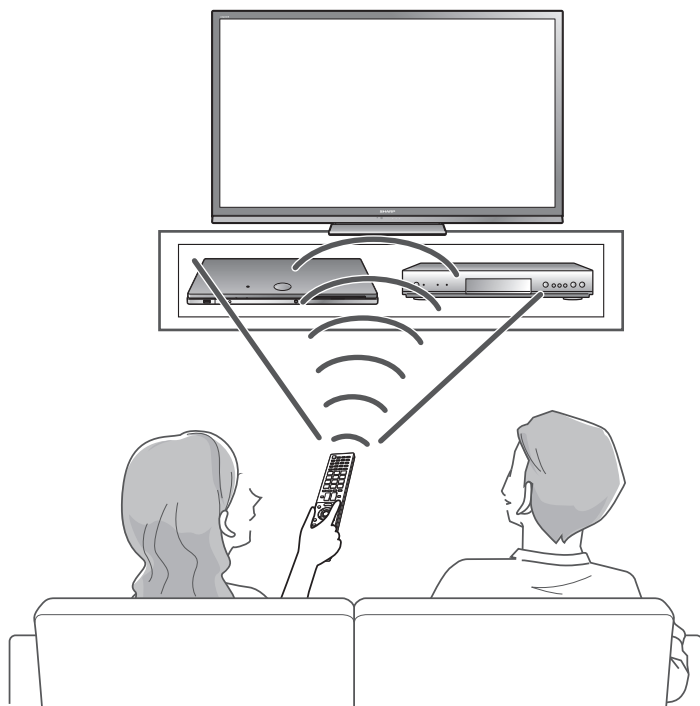

✓ Single remote control operation

AQUOS LINK automatically recognises connected HDMI devices and you can control the TV and the devices as if using a universal remote control unit.

NOTE

- When you use AQUOS LINK, make sure to use a certified HDMI cable.
- Point the remote control unit toward the TV, not to the connected HDMI device.
- Video noise may occur depending on the type of HDMI cable used. Make sure to use a certified HDMI cable.
- Up to three HDMI recording devices, one AV amplifier and three players can be connected using this system.
- These operations affect the HDMI device selected as the current external source. If the device does not operate, turn on the device and select the appropriate external source using **INPUT**.
- When you insert/remove HDMI cables or change connections, turn on all connected HDMI devices before turning on the TV. Confirm that picture and audio are correctly displayed/output by selecting "HDMI1", "HDMI2", "HDMI3" or "HDMI4" from the "INPUT" menu.


AQUOS LINK connection

First connect the AQUOS AUDIO speaker system or an AQUOS BD player/AQUOS recorder that supports the HDMI CEC protocol.

NOTE

- Refer to the operation manual of the device to be connected for further details.
- After unplugging connection cables or changing the connection pattern, turn on the power of the TV after all relevant devices' power have been turned on. Change the external input source by pressing **INPUT**, select the appropriate external source and verify the audiovisual output.
- The four buttons (◀◀, ▶▶, ▶▶▶, ■) connected by a green line are used for time shift operations for the time shift function.

Connecting an AQUOS BD player/AQUOS recorder via the AQUOS AUDIO speaker system

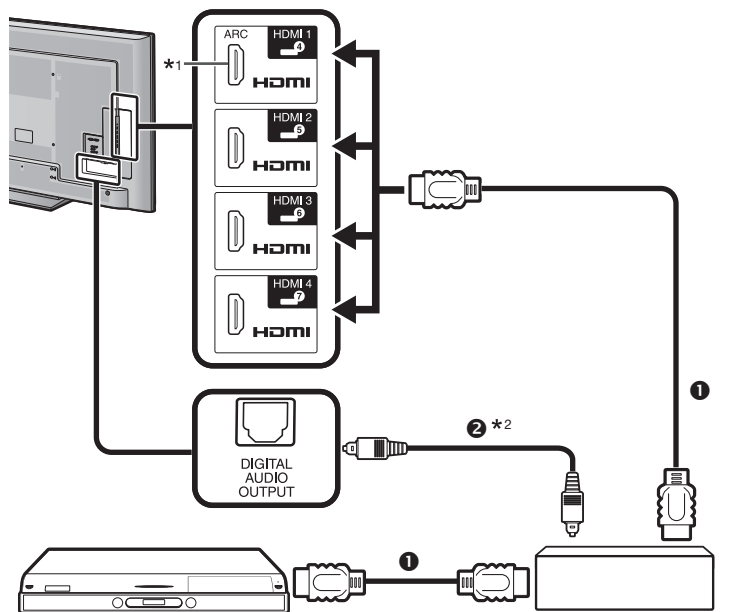

AQUOS BD player/AQUOS recorder


AQUOS AUDIO speaker system

- ① HDMI-certified cable (commercially available) ② Optical audio cable (commercially available)

*1 The ARC (Audio Return Channel) function works only when using the HDMI 1 terminal.

*2 When you use an audio system compatible with the ARC function of the TV, you do not need to connect an optical audio cable to the TV.


Connecting an AQUOS BD player/AQUOS recorder only

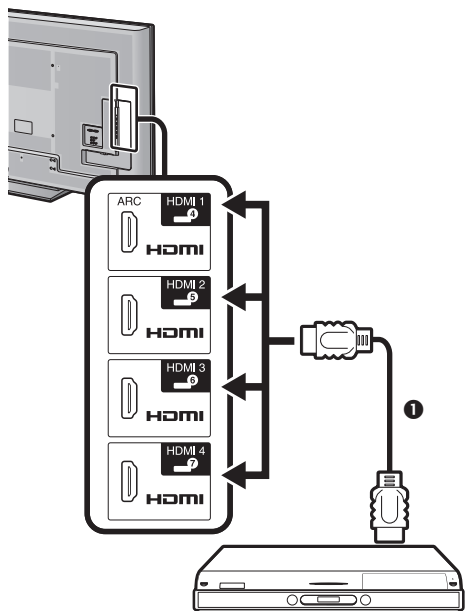

AQUOS BD player/AQUOS recorder

Operating an AQUOS LINK device

 AQUOS LINK allows you to operate the HDMI-connected device with a single remote control unit.



Use the following procedure to start playback.

- 1 Press **▶** to start playback of a title.
 - See the section **Top menu/title list** if you want to start playback using the list of the titles in the AQUOS BD player/AQUOS recorder.
- 2 Press **▶▶** to fast forward.
 Press **◀◀** to reverse.
 Press **■** to stop.
 Press **SOURCE** to turn the HDMI-connected device on/off.

Use the following procedure to start recording.

Check the following items before recording.

- Make sure the antenna cable is connected properly.
- Check if the recording media (HDD, DVD, etc.) has enough capacity for recording a programme.
- Select the equipment for recording in Selecting Recorder.

- 1 After you selected recording media (HDD, DVD, etc.) in the menu, please make sure the recording menu in the ready condition.
- 2 Press **REC** ● to start recording.
- 3 Press **REC STOP** ■ to stop recording.

AQUOS LINK menu

Go to “HOME” > “TV Menu” > “Link operation” > select the menu you want to set.

Link Operation	Description	Note
Recorder power on/off	This function is for turning of the CEC-compatible recorder on/off. Every time you press ENTER in “Recorder power on/off”, the CEC-compatible recorder will be turned on/off.	<ul style="list-style-type: none"> Refer to the operation manual of the recorder for details.
Top menu/title list	This section explains how to play back a title in the AQUOS BD player/AQUOS recorder. Press MENU to hide the menu screen to operate ▲/▼/◀/▶ buttons. Select the title with ▲/▼/◀/▶ , and then press ▶ .	<ul style="list-style-type: none"> The linked recorder now powers on and the TV automatically selects the appropriate external input source. The title list data from the connected AQUOS BD player/AQUOS recorder displays.
Setup menu	You can call up the menu of an HDMI CEC-compatible external device (player, recorder, etc.) using the “Setup menu” function.	<ul style="list-style-type: none"> If a connected device does not have this function or the device is in a status where the menu cannot be displayed (recording, entering standby, etc.), this function may not be available.
Media change	If your recorder has multiple storage media, select the media type here. Select the desired medium, such as DVD recorder or HDD. The media type changes every time you press ENTER .	
Recorder EPG	You can call up the CEC-compatible recorder’s EPG and preset timer recordings using the TV’s remote control. Select the programme to record.	<ul style="list-style-type: none"> The external input source switches and the recorder’s EPG is displayed. You can use ▲/▼/◀/▶, RETURN, EXIT and the coloured buttons. Refer to the operation manual of the recorder for details.
Change audio output device	You can choose to listen to the TV sound only from the AQUOS TV speaker system.	
Sound mode change	You can manually change the AQUOS AUDIO speaker system’s sound mode. The sound mode changes every time you press ENTER .	<ul style="list-style-type: none"> Refer to the operation manual of the AQUOS AUDIO speaker system for details.
Model select	If multiple HDMI devices are connected in a daisy chain, you can specify which device to control here. The HDMI device changes every time you press ENTER .	
AQUOS LINK setup		
AQUOS LINK control	Set to “On” to enable HDMI CEC functions.	
Auto power on	If this is activated, the one touch play function is enabled. While the TV is in standby mode, it automatically turns on and plays back the image from the HDMI source.	<ul style="list-style-type: none"> The factory default for this item is “Off”.
Selecting recorder	Here, you can select a recorder for the recording from several connected recorders.	<ul style="list-style-type: none"> If you have connected the AQUOS AUDIO speaker system between the TV and an AQUOS recorder, the external source’s indication changes (e.g., from “HDMI1” to “HDMI1 (Sub)”).
Selecting channel key	This function allows you to select the channel of the connected HDMI device using the TV’s remote control unit. Press ▲/▼ to select the input source of the connected HDMI device you want to control using the TV’s remote control unit, and then press ENTER . Press ◀/▶ to select “On”, and then press ENTER .	
Audio return channel	If this function is set to “Auto”, the TV can send audio data for video content shown on the TV to a connected audio device with just one ARC-compatible cable. Using this function eliminates the need to use a separate digital or analogue audio cable.	<ul style="list-style-type: none"> The ARC (Audio Return Channel) function works only when using the HDMI 1 terminal.

Connection for using “Audio return channel”

- You need to use ARC-compatible cables/devices and connect to the HDMI 1 terminal to activate this function. The connection method is the same as **Connecting an AQUOS BD player/AQUOS recorder via the AQUOS AUDIO speaker system** (Page 28).

Basic adjustment

Picture settings

Go to "HOME" > "TV Menu" > "Setup" > "Picture".



NOTE

- After selecting a menu such as "AV mode", "OPC", "Backlight", "Contrast", "Brightness", "Colour", "Tint" and "Sharpness", you can adjust while viewing more of the screen area by pressing **ENTER** to make the menu smaller.
- For resetting all adjustment items to factory preset values, press **▲/▼** to select "Reset", press **ENTER**, press **▲/▼** to select "Yes", and then press **ENTER**.

Picture AV mode

"AV mode" gives you several viewing options to choose from to best match the system environment, which can vary due to factors like room-brightness, type of programme watched or the type of image input from external equipment.

Press **▲/▼** to select the desired mode, and then press **ENTER**.

- You can also switch the mode on the "Picture" and "Audio" menu screen by pressing **AV MODE**.

Item	
AUTO	The TV automatically sets the appropriate selection from the "AV mode" menu depending on the lighting conditions and the type of programme watched.
STANDARD	For a highly defined image in a normally bright room.
MOVIE	For viewing a movie in a darkened room.
GAME	For playing of video games.
PC*1	For PC.
USER	Allows you to customise settings as desired. You can set the mode for each input source.
x.v.Colour*2	Produce realistic colour on the TV screen unlike any other signal.
DYNAMIC	For a clear-cut image emphasising high contrast for sports viewing.
DYNAMIC (Fixed)	For a clear-cut image emphasising high contrast for sports viewing (the "Picture" and "Audio" settings cannot be adjusted).

NOTE

*1 "PC" is available only when selecting "HDMI1", "HDMI2", "HDMI3", "HDMI4" or "PC" from the "INPUT" menu.

*2 "x.v.Colour" is available only when accepting an "x.v.Colour" signal through an HDMI terminal.

- You can select a different "AV mode" item for each input mode (for example, select "STANDARD" for TV input and "DYNAMIC" for VIDEO input).
- If you select "AUTO", some selections in the "AV mode" menu may not be automatically set.

Picture OPC

Automatically adjusts the brightness of the screen.

Item	
Off	The brightness is fixed at the value set in "Backlight".
On	Automatically adjusts.
On:Display	Displays the OPC effect on the screen while adjusting the brightness of the screen.

NOTE

- When set to "On", the TV senses the surrounding light and automatically adjusts the backlight brightness. Make sure no object obstructs the OPC sensor, which could affect its ability to sense surrounding light.
- When "Backlight" is adjusted, "OPC" is set to "Off".

Picture Picture adjustments

Adjusts the picture to your preference with the following picture settings.

Adjustment items

Selectable items	◀ (Cursor)	▶ (Cursor)
Backlight	The screen dims	The screen brightens
Contrast	For less contrast	For more contrast
Brightness	For less brightness	For more brightness
Colour	For less colour intensity	For more colour intensity
Tint	Skin tones become purplish	Skin tones become greenish
Sharpness	For less sharpness	For more sharpness

Basic adjustment



Picture

Advanced

This TV provides various advanced functions for optimising the picture quality.

Go to "HOME" > "TV Menu" > "Setup" > "Picture" > "Advanced".

C.M.S.-hue

This function adjusts the hue of a selected colour using a six-colour adjustment system.

C.M.S.-saturation

This function increases or decreases the saturation of a selected colour using a six-colour adjustment system.

C.M.S.-value

This function adjusts the brightness of a selected colour using a six-colour adjustment system.

Colour gamut range

Adjusts the range of a subset of colour to display the image. Expanded colour gamut means more colourfulness; images become more vivid.

Item	
Standard	Standard colour gamut.
Expanded	More vivid colour with expanded colour gamut.

NOTE

- This function is available only when selecting "MOVIE" from the "AV mode" menu.

Colour temp.

Adjusts the colour temperature to give the best white image.

Item	
High	White with bluish tone.
Mid-High	Intermediate tone between "High" and "Middle".
Middle	Natural tone.
Mid-Low	Intermediate tone between "Middle" and "Low".
Low	White with reddish tone.
R/G/B Gain (LO), R/G/B Gain (HI)	Adjusts the white balance by changing the value of each item.

Fine motion advanced

"Fine motion advanced" technologies provide superior solutions for digital display picture quality removing motion blur ("High", "Low", "Off").

NOTE

- This effect is greater on fast moving images.
- This function will have no effect in the following cases.
 - 1) The type of signal received is a PC signal.
 - 2) An OSD is being displayed.
 - 3) Teletext is activated.
- If images appear blurred, set to "Off".

Quad pixel plus

Reproduces high-definition images with higher resolution.

Gamma adjustment

Selects the tone difference of the brightness and darkness of the image according to the type of programme watched from a maximum of + 2 to a minimum of - 2.

Film mode

Automatically detects a film-based source (originally encoded at 24 or 25 frames per second, depending on the vertical frequency), analyses it and then recreates each still film frame for high-definition picture quality ("Advanced (High)", "Advanced (Low)", "Standard", "Off").

NOTE

- Film mode is not selectable depending on the input signal type.

Active contrast

Automatically adjusts the contrast of an image according to the scene.

DNR (Digital Noise Reduction)

"DNR" produces a clearer image ("Auto", "High", "Middle", "Low", "Off").

NOTE

- This function may not be available depending on the input signal type.

Monochrome

For viewing a video in black & white.

Range of OPC

The brightness level range of the OPC sensor's automatic adjustments can be set according to your preferences. The adjustment range of the OPC sensor can be set to a maximum of + 16 and a minimum of - 16.


NOTE

- This function is available only when the "OPC" setting is set to "On" or "On:Display".
- The maximum setting cannot be set to a smaller number than the minimum setting.
- The minimum setting cannot be set to a bigger number than the maximum setting.
- The maximum and minimum settings cannot be set to the same number.
- Depending on the brightness of the surrounding light, the OPC sensor might not operate if the adjustment range is small.

Basic adjustment

Audio settings

Go to "HOME" > "TV Menu" > "Setup" > "Audio".

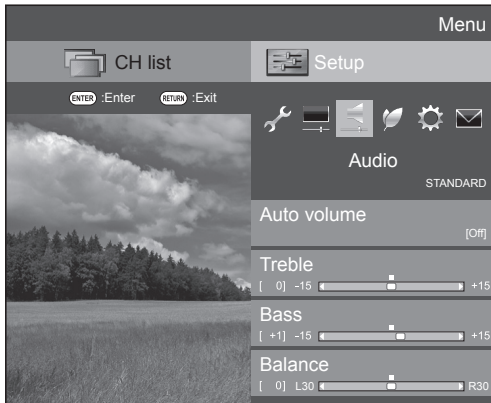

Audio SRS TS HD

This function produces a surround effect from the speakers.

Item	
On	SRS TruSurround HD™ creates a high quality surround sound experience, when watching DVD movies and TV programmes broadcast in surround sound.
Off	Outputs normal sound.

Audio Bass enhancer

This function allows you to enjoy bass-enhanced sound.

Audio Clear voice

This function emphasises speech against background noise for greater clarity.

Audio Audio description setting

This function allows you to enable output of audio description if the TV receives a signal including audio description.

NOTE

- When the "Audio description" is set to "On", the audio description sound is superimposed on the main audio when you select a broadcast compatible with audio description.
- If you do not clearly hear the sound for the visually impaired, go to "HOME" > "TV Menu" > "Setup" > "Audio" > "Audio description setting" > "Mix level", and select the upper level to turn up the volume.
- This function is available only for DTV broadcasts. This "Audio description setting" menu is not displayed for the ATV or the external inputs.
- The audio description sound is superimposed on the main audio only when the sound is output on the speaker sound output, headphone sound output and sound for audio out output. The sound is not output on the digital audio output and the HDMI sound output.
- This function is not available for the AQUOS Audio speaker system.
- This function does not work during time shift playback.

Audio Auto volume

Different sound sources sometimes do not have the same volume level, such as a programme and its commercial breaks. This function reduces this problem by equalizing levels.

Item	
High	Strongly reduces the volume gaps among different sound sources.
Middle	↕
Low	Slightly reduces the volume gaps among different sound sources.
Off	Does not adjust the volume gaps.

Audio Audio adjustment

You can adjust the sound quality to your preference with the following settings.


Item	◀ (Cursor)	▶ (Cursor)
Treble	For weaker treble	For stronger treble
Bass	For weaker bass	For stronger bass
Balance	Decrease audio from the right speaker	Decrease audio from the left speaker

NOTE

- For resetting all adjustment items to factory preset values, press ▲/▼ to select "Reset", press **ENTER**, press ▲/▼ to select "Yes", and then press **ENTER**.

Power save settings

Go to "HOME" > "TV Menu" > "Setup" > "ECO".

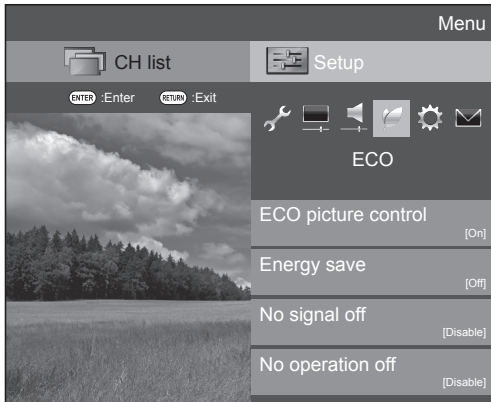

NOTE

- You can also select "ECO" by pressing **ECO**.

ECO ECO picture control

This function automatically detects the image source and decreases the power consumption while keeping the brightness of the image unchanged.

NOTE

- This function does not work when "AV mode" is set to "DYNAMIC (Fixed)", "DYNAMIC" or "AUTO".
- This function does not work when "Energy save" is set to "Standard" or "Advanced".

ECO Energy save

This function enables you to reduce the backlight brightness in order to decrease the power consumption and increase the backlight life span as shown in the following table.

Item	
Standard	Reduces the backlight brightness.
Advanced	Reduces the backlight brightness more than "Standard".
Off	The backlight brightness is the same value of your settings in the selected "AV mode".

When "Energy save" is set to "Standard" or "Advanced", "Energy save" status icons appear in the "Picture" menu and channel information windows.

NOTE

- This function does not work when "AV mode" is set to "DYNAMIC (Fixed)".

ECO No signal off

When set to "Enable", the TV will automatically enter standby mode if there is no signal input for 15 minutes.

NOTE

- Even if a TV programme finishes, this function may not operate because of interference from other TV stations or other signals.

ECO No operation off

You can set the TV to automatically power off when no TV operation is performed for 30 minutes or 3 hours.

NOTE

- "Disable" is the factory preset value.

ECO Sleep timer

Allows you to set a time when the TV automatically enters standby mode. You can set the time span for entering standby mode after selecting "Change".

NOTE

- Select "Off" to cancel the sleep timer.
- When the time has been set, countdown automatically starts.
- Five minutes before the preset of time expires, the remaining time displays each minute.

ECO Audio only

When listening to music from a music programme, you can set the TV off and enjoy audio only.


Item	
On	Audio is output without a screen image.
Off	Both screen images and audio are output.

NOTE

- When you make operations that change the picture on the TV such as by changing the input source, the "Audio only" function is set to "Off".

Channel settings

Go to "HOME" > "TV Menu" > "Setup" > "View setting".

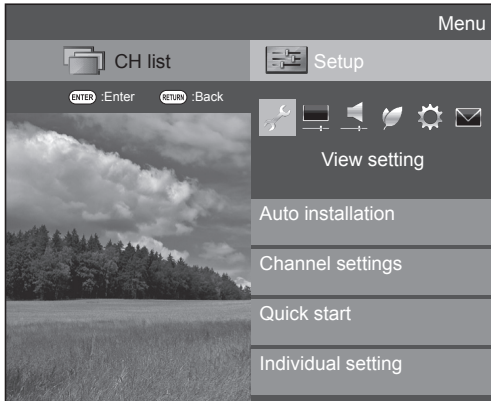

View setting

Auto installation

The TV automatically detects and stores all available services in your area. This function also allows you to perform the channel setting and reconfigure the settings after the initial auto installation has been completed.

- Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Auto installation".
- If you have already set the password, enter it here.
 - See page 36 for setting a password.
- Press ◀/▶ to select "Yes", and then press **ENTER**.
- Press ▲/▼ to select the desired language, and then press **ENTER**.
 - You do not need to do anything during the auto search.
- Press ▲/▼ to select "Digital search" or "Analogue search", and then press **ENTER**.
 - When the country setting is set to "Australia", only "Digital search" is available.

NOTE

- You cannot set the Home/Store setting and the country setting in "Auto installation" in the "Setup" menu. If you want to reconfigure those settings, automatically execute initial auto installation after executing "Reset" from the "Setup" menu.
- The current country setting is displayed on the screen.

View setting

Programme setup

You can run the auto search procedure again at any time by accessing the "Setup" menu and "Programme setup". Channels can be tuned automatically or manually.

Digital setting

You can reconfigure the DTV channel settings automatically or manually.

- Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Channel settings" > "Programme setup".
- If you have already set the password, enter it here.
 - See page 36 for setting a password.

- The "Digital setting" screen displays, and then press **ENTER**.
- Press ▲/▼ to select the desired menu item, and then press **ENTER**.
- Press ◀/▶ to select "Yes", and then press **ENTER**.

Additional search

Use this menu to add new services automatically after "Auto installation" has been completed.

- Start searching channels after selecting the colour system and sound system.


Manual search

Add new services within a specified frequency band.

- Enter the frequency using **0-9** numeric buttons.

Manual adjust

Configure various settings for each service using the colour (**R/G/Y/B**) buttons.

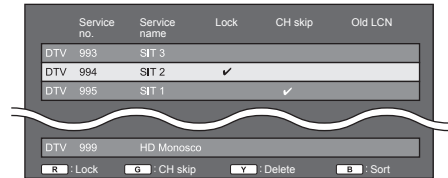

- Press ▲/▼ to select the desired service.
- Press the colour button on the remote control unit corresponding with the item you want to reconfigure.
 - The ✓ mark indicates the operation is set to on. Each time the colour button is pressed, you can switch the corresponding operation on/off.

Buttons for "Manual adjust" operation

Lock Press **R** button.

When the service is locked, you must enter your password whenever you tune to the service.

CH skip Press **G** button.

Services with a ✓ mark are passed over when pressing **CH** ▲/▼ on the TV or remote control unit.

Delete Press **Y** button.

The selected service is deleted. If you want to watch the service you deleted once again, perform "Auto installation", "Additional search", or "Manual search".

Sort Press **B** button.

The item position of services can be sorted.

- Press ▲/▼ to select the service whose item position you want to move, and then press **ENTER**.



- Press ▲/▼ to move it to the desired position, and then press **ENTER**.



- Repeat steps 1 and 2 until all desired service items are sorted.

Basic adjustment

Analogue setting

- 1 Repeat steps 1 and 2 in **Digital setting**.
- 2 The “Analogue setting” screen displays, and then press **ENTER**.
- 3 Repeat steps 4 and 5 in **Digital setting**.

NOTE

- The “Analogue setting” menu is available only for watching TV in ATV mode.

Additional search

Use this menu to add new services automatically after “Analogue search” in the “Auto installation” menu has been completed.

- Start searching channels after selecting the colour system and sound system.

Manual adjust

You can reconfigure the analogue TV channels settings automatically or manually.

After selecting “Yes” on the screen, press ▲/▼/◀/▶ to select the channel you want to set and then press **ENTER**.

Programme Setup “Manual Adjust” menu

01	02	03	04	05
06	07	08	09	10
11	12	13	14	15
16	17	18	19	20
Next				

You can select one of the following settings.

Search

You can add a new channel within a specified frequency band.

Item	
Next	Search the next channel.
Store	Memorise the current display channel.
Cancel	Return to the previous screen (the search result will not be stored).

Fine

You can adjust the frequency to the desired position.

NOTE

- Adjust while checking the background picture as a reference.
- Instead of pressing ◀/▶ to adjust the frequency, you can set by directly entering the frequency number of the channel with 0–9 numeric buttons.
- When setting a frequency on the “Fine” screen, the last figure of the frequency needs to be “0” or “5”.

EXAMPLE

- 179.25 MHz: Press 1 > 7 > 9 > 2 > 5.
- 49.25 MHz: Press 4 > 9 > 2 > 5 > **ENTER**.

Colour sys.

Select the optimum colour system to receive (“Auto”, “PAL”, “SECAM”, “NTSC3.58”, “NTSC4.43”).

Sound sys.

Select the optimum sound systems (broadcasting systems) to receive (“B/G”, “D/K”, “I”, “M”).

NOTE

- Check the sound system if the sound output were not correct.

Label

When a TV channel sends its network name, the “Auto installation” detects the information and assigns a name to it. However, you can change channel names individually.

Select each character of the new name for the channel with using the software keyboard (see page 13).

NOTE

- The name can be five characters or less. Select “Cancel” to set the channel name.

Skip

Channels with “Skip” set to “On” are passed over when using **CH**▲/▼ even if selected while watching the image from the TV.

Lock

You can block the viewing of any channel.

NOTE

- See page 36 for setting a password.
- When “Lock” is set to “On” for a channel, “Child lock has been activated” displays, and the image and sound of the channel are blocked.
- When pressing **RETURN** while “Child lock has been activated” displays, the password input window will display. Inputting the correct password unlocks the “Password” temporarily until the power is turned off.

Sort

Channel positions can be sorted freely.

- 1 Press ◀/▶ to select “Yes”, and then press **ENTER**.
- 2 Press ▲/▼/◀/▶ to select the channel you want to move, and then press **ENTER**.
- 3 Press ▲/▼/◀/▶ to move it to the desired position, and then press **ENTER**.
- 4 Repeat steps 2 and 3 until all desired channels are sorted.

Erase programme

Channels can be erased individually.

- 1 Press ◀/▶ to select “Yes”, and then press **ENTER**.
- 2 Press ▲/▼/◀/▶ to select the channel you want to erase, and then press **ENTER**.
 - A message window pops up.
- 3 Press ◀/▶ to select “Yes”, and then press **ENTER** to erase the selected channel. All the subsequent channels move up.
- 4 Repeat steps 2 and 3 until all desired channels are erased.

Useful viewing functions

TV Start-up time setting



View setting

Quick start

You can reduce the TV's start-up time after turning on the power with the remote control unit.

Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Quick start".

Item	
On	The TV quickly starts up from standby. 34 W or more of power consumption is required during standby.
Off	Power consumption is small during standby.

Individual setting – password



View setting

Password

Allows you to use a password to protect certain settings from being accidentally changed.

Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Individual setting" > "Password".

● Setting a password

Register a four-digit password number to use the "Password" function.

- 1 If you already set the password, enter it here.
- 2 Press ◀/▶ to select "Yes", and then press ENTER.
- 3 Enter the four-digit number as a password using 0–9 numeric buttons.

Password

Setting Password. You can change or clear Password

Yes No

Enter your new password.
Use 4 digits

_ _ _ _

Enter the password again to confirm

_ _ _ _

- 4 Enter the same four-digit number as in step 3 to confirm.
- 5 Press ENTER.

NOTE

- To view a locked channel, you must enter the password (see page 35 for locking channels password). When you select a locked channel, a password prompt message pops up. Press RETURN to display the password input window.

● Deleting the password

Allows you to reset your password.

- 1 Enter the password.
- 2 Press ◀/▶ to select "No", and then press RETURN.
- 3 Press ◀/▶ to select "Yes", and then press ENTER.

Password

Delete password?

Yes No

NOTE

- As a precautionary measure, make a note of your password on page 68, cut it out and keep it in a safe place that children cannot reach.
- This function is only available for TV input mode.
- To relock a channel which has been temporarily unlocked by inputting the correct password, turn power off and then on again.



View setting

Parental rating

This function allows DTV services to be restricted. It prevents children from watching violent or sexual scenes that may be harmful.

- 1 Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Individual setting" > "Parental rating".
 - Repeat steps 1 to 5 in **Setting a password** to the left.

Selected item	Description
No block	Cancel the blocking.
age xx years	Select desired age to block. (Example) If age 14 is selected, programmes rated for ages of 15 or more are blocked.
General and above (G)	Content is not offensive to most viewers.
Parental guidance and above (PG)	Content is such that parents may not want their children to view the programme.
Mature and above (M)	Mature audience only. This programme is specifically designed to be viewed by adults and therefore may be unsuitable for children under 15.
Mature adult and above (MA)	Mature adult only. This programme is specifically designed to be viewed by adults and therefore may be unsuitable for children under 15.
Adult violence and above (AV)	Not for children under age 15. Strong elements of sex and/or violence.
Restricted and above (R)	Not for children under age 18. Strong elements of sex and/or violence.

Useful viewing functions

Individual setting – time



View setting

Time display

Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Individual setting” > “Time display”.

Time display

This function allows you to display the clock time in the lower-right corner of the screen.

Item	
On	Displays the clock time.
On (half-hourly)	Displays the clock time in 30-minute increments.
Off	Hides the clock time.

NOTE

- Time information is available when channel time information including the teletext information is obtained in the “TV” mode.

Time format

You can select the time format (either “24HR” or “AM/PM”) for the clock time.

NOTE

- The displayed time may differ depending on the programmes because of the programme information.



View setting

Time zone

This function enables you to select your local time zone.

Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Individual setting” > “Time zone”.

NOTE

- This function lets you select the right time zone in case the time displayed in the EPG does not match the local time of your area.
- When the country setting is set to “Australia” or “Indonesia”, this function is available. When the country setting is set to “Singapore”, “New Zealand” or “Malaysia”, this function is not available.

Individual setting – language



View setting

Digital audio language

Set up to three preferred multi audio languages to display if the audio languages are available.

Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Individual setting” > “Digital audio language”.

Switching the multi audio languages

Each time you press **MPX** on the remote control unit, the audio language switches.

NOTE

- This function depends on audio language information from broadcasters.
- If audio for the selected language is not included in a received broadcast, audio will not be output for that language.



View setting

Subtitle


Set up to two preferred subtitle languages (including subtitles for the hearing impaired) to display if subtitles are available.

 
Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Individual setting” > “Subtitle”.

Selectable items

- 1st language
- 2nd language
- For hearing impaired

Switching subtitle languages


Each time you press  on the remote control unit, the subtitle switches.



Set “For hearing impaired” to “Yes”

Subtitles for the hearing impaired have priority over each of the subtitle language settings (e.g., “1st language”, “2nd language”, etc.).

 EXAMPLE



NOTE

- Subtitles will not be displayed when the programme does not contain subtitle information.



View setting


Language

You can select an OSD language. Refer to the **OSD language** column in the specification table for the selectable languages (Page 65).

Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “Language”.

Optional features settings

Go to "HOME" > "TV Menu" > "Setup" > "Option".

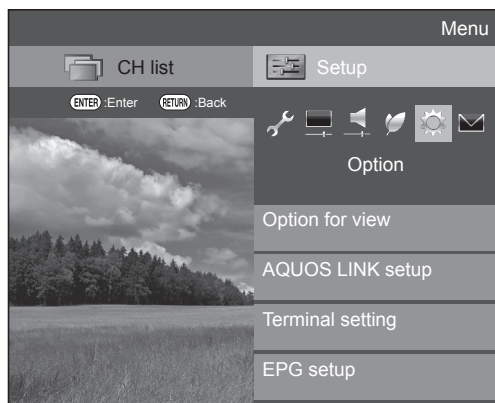

Selecting the picture size manually



You can select the picture size. Selectable picture size varies with the type of signal received.

- 1 Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Option for view" > "Wide mode".
 - You can also select an item by pressing **WIDE** on the remote control unit.
 - The menu lists the "Wide mode" options selectable for the type of video signal currently received.
- 2 Press **▲/▼** to select the desired item.
 - As you toggle the options, each is immediately reflected on the screen. There is no need to press **ENTER**.

Basically, if you set "WSS" to "On" in the "Option" menu, the optimum "Wide mode" is automatically chosen for every broadcast or programme played using a VCR or DVD player/recorder.

NOTE

- Even if you select your desired "Wide mode" manually, the TV may automatically switch to the optimum "Wide mode" depending on the signal received when "WSS" is set to "On".

Item (for SD [Standard-Definition] signals)	
Normal	Keeps the original aspect ratio in a full screen display.
Zoom 14:9	For 14:9 letterbox pictures. A thin side bar appears on each side, and you may also see bars on the top and bottom with some programmes.
Panorama	In this mode, the picture is stretched toward each side of the screen. The picture may appear similar to "Full" depending on broadcast signals.
Full	For 16:9 squeeze pictures.
Cinema 16:9	For 16:9 letterbox pictures. Bars may appear on the top and bottom with some programmes.
Cinema 14:9	For 14:9 letterbox pictures. Bars may appear on the top and bottom with some programmes.

Item (for HD [High-Definition] signals)	
Full	Displays with an overscan image. Crops all sides of screen.
Underscan	Displays with an underscan image only when receiving a 720p signal. Displays with the High-Definition image adjusted optimally. Noise may appear on the edge of the screen with some programmes.
Dot by Dot	Displays an image with the same number of pixels on the screen when receiving 1080i/1080p signals only.

NOTE

- Some items do not appear depending on the type of received signal.
- Refer to page 57 for PC signals.

Selecting the WSS picture size automatically



The "WSS" allows the TV to switch automatically among the different picture size.

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "WSS".

NOTE

- Use "Wide mode" if an image does not switch to the appropriate picture size. When the broadcast signal contains no "WSS" information, the function will not work even if enabled.

Useful viewing functions

Option 4:3 mode

The “WSS” signal has 4:3 auto-switching that allows you to select between “Normal” and “Panorama”.

Go to “HOME” > “TV Menu” > “Setup” > “Option” > “4:3 mode”.

Item	
Normal	Normal range keeping 4:3 or 16:9 aspect ratio.
Panorama	Wide image without side bars.

WSS signal 4:3 screen

4:3 mode “Normal”



4:3 mode “Panorama”



Setting audio input

Option Audio select

When using the PC terminal or HDMI 2 terminal, you must select which terminal uses the AUDIO IN jack for analogue audio input.

Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Terminal setting” > “Audio select”.

When selecting “HDMI2” from the “INPUT” menu

Item	
HDMI (Digital)	When connecting devices (including a PC) with a HDMI cable to the HDMI 2 terminal.
HDMI + Analogue	When connecting devices (including a PC) with a DVI/HDMI cable to the HDMI 2 terminal and inputting analogue audio signals from the AUDIO IN jack.

When selecting “PC” from the “INPUT” menu

Item	
Video	When connecting devices with AV cable to the PC terminal, display images without audio.
Video + Audio	When connecting a PC to the PC terminal, and inputting analogue audio signals from the AUDIO IN jack.

Skipping specified inputs

Option Input skip

This setting allows you to skip the inputs on the input source selection operation.


Go to “TV Menu” > “Setup” > “Option” > “Terminal setting” > “Input skip”.

Useful viewing functions

Option Input label

You can label each input source with a custom description.

- 1 Press **INPUT** to select the desired input source from the "INPUT" menu, and then press **ENTER**.
- 2 Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Terminal setting" > "Input label".
- 3 Select each character of the new name for the input source with using the software keyboard (Page 13).
- 4 Repeat the above until the name is fully spelt out, and then press **MENU**.
 - The label can be six characters or less.
 - When you want to set an input source name of less than six characters, select "Cancel".

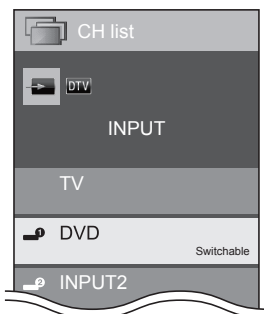

NOTE

- You cannot change labels if the input source is "TV", "USB media", "Home network", "YouTube" or "AQUOS.NET".

Selecting the HDMI picture size automatically

Option HDMI auto view

This function allows you to automatically change to the appropriate picture size when viewing an HDMI signal using the HDMI 1, 2, 3 and 4 terminals.

- 1 Press **INPUT** to select the input source ("HDMI1", "HDMI2", "HDMI3" or "HDMI4") connected to your HDMI device, and then press **ENTER**.
- 2 Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Terminal setting" > "HDMI auto view".

Item	
Enable/Disable	Set whether or not to use "Wide mode" based on signal recognition, including an HDMI signal.

NOTE

- Refer to your external equipment operation manual for the above settings.
- When connecting a DVI-HDMI conversion adaptor/cable to the HDMI terminal, the image may not come in clearly.

Option Headphone/Audio out select


You can select which device is used for outputting audio.
Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Terminal setting" > "Headphone/Audio out select".

Item	
Headphone	Output audio through headphones.
Audio out	Output audio through an A/V receiver or surround audio controller.

Regarding the headphone jack

- Use headphones with a stereo mini plug (Ø 3.5 mm).
- Be sure to unplug headphones from the jack when they are not in use.
- The speakers do not output volume when headphones are plugged in.
- The "Audio" menu cannot be operated when headphones are plugged in.
- You can set the volume to different levels for each input source.

 Volume display when headphones are plugged in



CAUTION

- This terminal is also used for headphones. Reduce the volume before using headphones. Overwhelming sound may damage your hearing.

NOTE

- If you select "Audio out" when a cable is inserted in the AUDIO IN terminal, the TV speakers are muted.
- When you select "Audio out", you can adjust the TV sound volume with the **VOL -/+** buttons on the TV or the remote control unit.

Option Colour system

You can change the colour system to one that is compatible with the image on the screen.

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Colour system".

NOTE

- The factory preset value is "Auto".
- If "Auto" is selected, the colour system for each channel is automatically set. If an image does not display clearly, select another colour system (e.g., "PAL", "SECAM").

Useful viewing functions

Option Channel selecting effect

This function shows a screen effect when choosing or changing channels.

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Screen effect" > "Channel selecting effect".

Option Programme title display

This function allows you to display programme information such as the title and airtime by tuning a channel.

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Screen effect" > "Programme title display".

NOTE

- This function is available only when the DTV mode is selected.

Adjusting image position

Option Position

For adjusting a picture's horizontal and vertical position.

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Screen effect" > "Position".

Item	
H-Pos.	Centres the image by moving it to the left or right.
V-Pos.	Centres the image by moving it up or down.

NOTE

- For resetting all adjustment items to the factory preset values, press ▲/▼ to select "Reset", and then press **ENTER**.
- Adjustments are stored separately for each input source.
- Depending on the input signal type, "Wide mode" setting or "Video mode" for the USB media mode, a position setting may not be available.
- Images may not be displayed properly depending on the settings and/or signals.

Additional features

Option Game play time

This function allows you to display the elapsed time on the screen when "AV mode" is set to "GAME".

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Game play time".

Item	
On	Under connecting a game console to the TV, the elapsed time is displayed in 30-minute increments after you start playing a game.
Off	Hides the time.

NOTE

- This function is displayed in the external input mode.
- This function is reset after performing the following operations:
 - When toggling the input.
 - When changing "AV mode".

Option Key lock

This function allows you to lock the buttons on the TV or remote control unit in order to prohibit children from changing the channel or volume.

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Key lock".

Item	
Off	Unlocks the buttons.
RC control lock	Locks all buttons on the remote control unit.
Button control lock	Locks the buttons on the TV except the power switch.

NOTE

- You cannot set both "RC control lock" and "Button control lock" at the same time.

● Cancelling the lock

Press **MENU** on the TV and set to "Off" to cancel the "RC control lock". Press **MENU** on the remote control unit and set to "Off" to cancel the "Button control lock".

NOTE

- See page 15 for the functions of the TV control buttons.
- To cancel "Button control lock", use the remote control.

Network function

Connecting to the network

To enjoy internet services, you need to connect the TV to a router with a high speed connection to the internet. You can also connect the TV to your Home network server through a router or access point. The TV connection to the router can either be wired or wireless.


NOTE

- If you choose a wired connection to the router, you need an ETHERNET cable (commercially available).
- If you do not have a broadband internet connection, consult the store where you purchased your TV or ask your internet service provider or telephone company.
- An Ethernet and wireless connection cannot be used at the same time. Use only one of the connection types.
- A stable connection speed is required to play back streaming content, otherwise you may not be able to watch normally.

Wired installation


Use an ETHERNET cable to connect the ETHERNET terminal on the TV to your broadcast router as shown below. This is recommended when enjoying services which require stable connection speeds, such as streaming media.

Wired connection overview

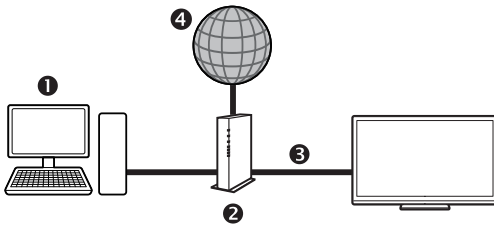


- 1 PC (home network server)
- 2 Router (commercially available)
- 3 ETHERNET cable (commercially available)
- 4 Network

How to connect

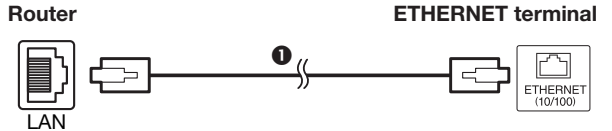

- 1 ETHERNET cable (commercially available)

- 1 Switch on the router (commercially available). Refer to the router's operation manual for switching on.
- 2 Connect the ETHERNET terminal on the TV to the router (commercially available) with an ETHERNET cable (commercially available).
- 3 Go to "HOME" > "Network setup" > "Connection type".
- 4 Press ◀/▶ to select "Wired", and then press ENTER.
 - The wired connection will be automatically established. To change the settings manually, go to "HOME" > "Network setup" > "IP setup" and follow the on-screen instructions and the operation manual of the router.

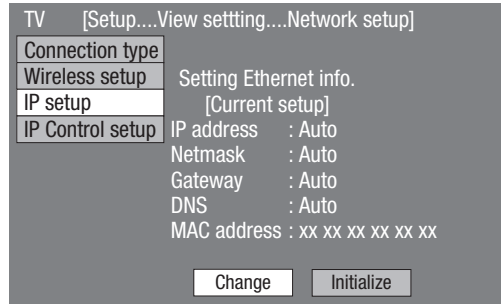


- 5 Select "OK" to confirm.
 - If you have failed to connect to the internet in the above operation, an error message will appear. In this case, press INPUT to return to the normal TV screen and check the relevant settings.

Network function

Wireless installation

Use the wireless LAN USB adapter (optional accessory).

● Wireless connection overview

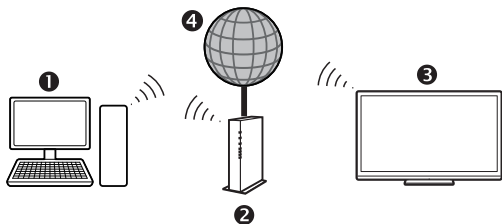


- 1 PC (home network server)
- 2 Wireless LAN router/access point
- 3 Wireless LAN USB adapter (optional accessory)
- 4 Network

NOTE


- When using the SHARP wireless LAN USB adapter (optional accessory), try to provide as much free space around the device for best performance.
- A wireless LAN connection and performance cannot be guaranteed for all residential environments. In the following cases, the wireless LAN signal may be poor or drop, or the connection speed may become slower.
 - When used in buildings made with concrete, reinforced steel, or metal
 - When placed near objects that obstruct the signal
 - When used with other wireless devices that emit the same frequency
 - When used in the vicinity of microwave ovens and other devices that emit a magnetic field, electrostatic charge, or electromagnetic interference
- Make sure the firewalls in your network allows access to the TV wireless connection.
- Operations cannot be guaranteed when used with access points that do not have Wi-Fi® certification.
- A wireless LAN access point is required to connect the TV to the Internet using a wireless LAN. See the operation manual of your access point for setup.
- A stable connection speed is required to play back streaming content. Use an Ethernet connection if the wireless LAN speed is unstable.
- Before transferring to a third party or disposal, be sure to initialise the wireless LAN settings.

● How to connect

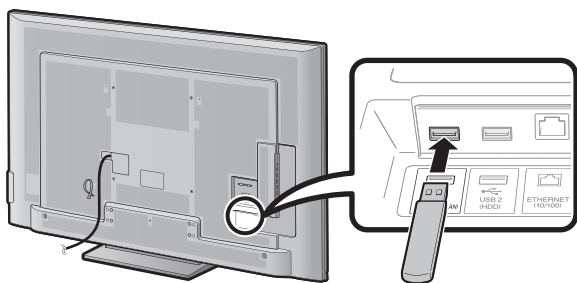


- 1 Switch on your router before starting the network installation.
- 2 Connect the wireless LAN USB adapter (optional accessory) to the USB 3 (WIRELESS LAN) port on the rear of the TV.
- 3 Go to “HOME” > “Network setup” > “Connection type”.

- 4 Press ◀/▶ to select “Wireless”, and then press ENTER.
- 5 Select “OK” to confirm.
- 6 Press ▲/▼ to select “Wireless setup” in the “Network setup” menu.
- 7 Press ◀/▶ to select “Change”, and then press ENTER.
- 8 Press ▲/▼ to select “WPS”, and then press ENTER.

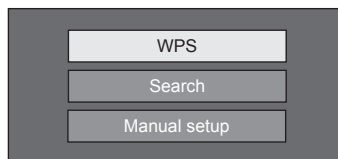

- If your router/access point does not support WPS (= Wi-Fi Protected Setup), select “Search” and follow the on-screen instructions and the operation manual of the router/access point.
- To establish the connection manually, select “Manual setup” and follow the on-screen instructions and the operation manual of the router/access point.

 - 9 Press ▲/▼ to select “Push button”, and then press ENTER.



- To establish the connection manually, select “PIN code”. Follow the on-screen instructions and the operation manual of the router/access point.

- 10 Select “Next” to proceed.
- 11 Press the WPS button on the router/access point. When you press the WPS button, a progress bar will appear on the display. Wait until the connection is established.
- 12 Select “OK” when the connection details are displayed.
 - If you have failed to connect to the internet in the above operation, an error message will appear. In this case, press INPUT to return to the normal TV screen and check the relevant settings.

NOTE

- There is no need to enter the security key for subsequent connections to the wireless network.
- If your access point is set to a stealth mode (that prevents detection by other devices), you may not be able to establish a connection. In this case, disable the stealth mode on the access point.
- If you want to change the IP settings manually, go to “HOME” > “Network setup” > “IP setup” and follow the on-screen instructions and the operation manual of the router.
- See page 44 to check the wireless LAN USB adapter specifications.

Network function

Specifications (Wireless LAN USB adapter)

Product name		802.11n Dual Band WLAN adapter	
Standard		IEEE 802.11a/b/g/n	
Host interface		USB	
Frequency band		2412–2484 MHz 5150–5850 MHz	
Security		Static WEP (64/128 bit, key index 1 only) WPA-PSK (TKIP) WPA2-PSK (AES)	
Modulation		DBPSK@1 Mbps DQPSK@2 Mbps CCK@5.5/11 Mbps BPSK@6/9 Mbps QPSK@12/18 Mbps 16-QAM@24 Mbps 64-QAM@48/54 Mbps and above, Rx up to 300 Mbps	
Transmit power and sensitivity	Tx output power: (Typical)	2.4 GHz	11b 17 +/- 1.5 dBm 11g 14 +/- 1.5 dBm 11n 13 +/- 1.5 dBm
		5 GHz (5150–5250 MHz, 5250–5350 MHz)	11a 14 +/- 1.5 dBm 11n 13 +/- 1.5 dBm
		5 GHz (5470–5725 MHz, 5725–5850 MHz)	11a 13 +/- 1.5 dBm 11n 13 +/- 1.5 dBm
	Rx sensitivity: (Typical)	–84 dBm@11 Mbps –72 dBm@54 Mbps –64 dBm@64-QAM, 20 MHz channel spacing –61 dBm@64-QAM, 40 MHz channel spacing	
Current Consumption (5 V DC)		Tx: 2.2 W (Typical) Rx: 1.4 W (Typical)	
Weight		13 g	
Dimensions		20.0 (W) × 73.3 (D) × 8.0 (H) mm	
Operating temperature		0°C to + 40°C	

NOTE

- The optional wireless LAN USB adapter has received the following certifications.
 - Wi-Fi CERTIFIED™ (certification program from the Wi-Fi Alliance®)
 - Wi-Fi Protected Setup™ (certification program from the Wi-Fi Alliance®)
- When there is significant interference in the 2.4 GHz frequency (such as from other wireless LAN devices, Bluetooth® devices, 2.4 GHz cordless telephones, and microwave ovens), it is recommended that you use a wireless LAN access point that supports IEEE802.11a/n (5 GHz) and set the access point to transmit at 5 GHz. For setup details, see the operation manual of your access point.
- Before transferring to a third party or disposal, be sure to initialize the wireless LAN settings.
- Wireless LAN USB adapter is Peripheral Device for TV and supports WEP64, WEP128, TKIP and AES encryptions.

Optional accessories (Wireless LAN USB adapter)

The optional wireless LAN USB adapters vary by model available for purchase depending on the sales area. See the following table.


KI-OUA004WJN1	Indonesia, Malaysia, Philippines, Singapore, Thailand, Vietnam, Australia, New Zealand, India, Taiwan, UAE, Saudi Arabia
KI-OUA004WJN2	Morocco, Egypt, Kenya, South Africa, Bahrain, Kuwait, Oman, Qatar, Jordan, Lebanon, Ghana, Cambodia, Bangladesh, Brunei, Papua New Guinea, Mauritius, Maldives, Kazakhstan, Georgia, Angola, Myanmar, Sri Lanka, Laos
KI-OUA004WJN3	Algeria, Senegal, Niger, Benin, Burkina Faso, Mali, Mozambique, Madagascar, Zambia, Nepal, Tanzania, Fiji Islands
KI-OUA004WJN4	Nigeria

Network function

Using AQUOS.NET

By connecting the TV to the Internet, you can enjoy a variety of broadband content.

- 1 Press **HOME** to display the "HOME" screen.
- 2 Press **▲/▼/◀/▶** to select the "AQUOS.NET" service, and then press **ENTER**.

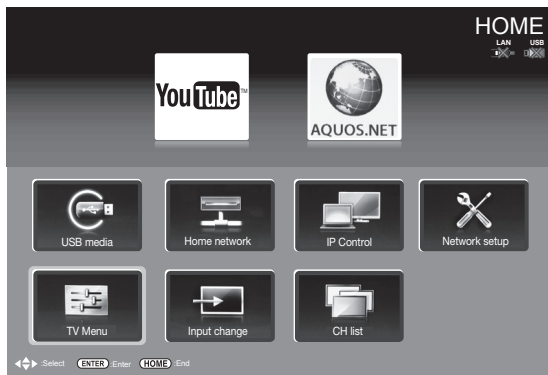

- If "✖" is displayed, check your TV's network settings and connection.

- 3 The screen for AQUOS.NET is displayed.

Example : The image shown below, which is only for explanation, is subject to change.



NOTE

- Additional applications will be available in the future.
- The delivery speed of applications varies depending on the network speed. Check the web site of the provider for details on application setup and other information.

- 4 Press **▲/▼/◀/▶** to select a function, and then press **ENTER**.

Selected item	Description
	Displays the AQUOS.NET Top page.
	Returns to the previous page.
	Goes back to the original page after viewing the previous page.
	Refreshes the page. Interrupts a page while it is loading.
	Select this to open a bookmark.
	Adds the current page to your bookmarks.

- 5 Press **▲/▼/◀/▶** to select the address bar, and then press **ENTER**.

Example : The image shown below, which is only for explanation, is subject to change.



Address bar

- 6 The software keyboard will pop up when you press **ENTER** again. Use the software keyboard to input the URL, and then press **ENTER**.

NOTE

When "✖" is displayed in a page:

- The page failed to load successfully, or it contains images with formats that cannot be displayed on the TV. Try reloading the page by selecting "🔄" (see this page) in the toolbar.
- Press **CH▲** : Page up during Internet access.
- Press **CH▼** : Page down during Internet access.

Clear browser setting

You can clear browser settings, which include cookies, bookmarks and caches.

Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Clear browser setting".

NOTE

- Password input is required when executing "Clear browser setting" if password is set.

CAUTION

- If you perform this operation, browser settings will be completely cleared. If there is important information, take notes before executing.

About links

- Web pages on the Internet often include "links" that allow you to jump to other web pages (or sites).
- "Links" can take various forms, including words or images, but they always work in the same way, letting you jump to the link destination when you select them.
- You can jump from a "link" to the corresponding link destination.

CAUTION

- If the power is cut due to a power failure or the TV being unplugged while you are using the Internet, information such as bookmarks or cookies may not be saved correctly.

For users who access the Internet from a PC

- When you access the Internet from this TV, the procedures may not be the same as regular browser-based access on a PC.
- You cannot download files nor install programmes.
- Video and audio* cannot be played, and text or images may not be displayed correctly.

* Including content which can be viewed using the Adobe® Flash® Player.

DISCLAIMERS

This Sharp device facilitates the access to content and services provided by third parties. The content and services accessible via this device belong to and may be proprietary to third parties. Therefore, any use of such third party content and services must be in accordance with any authorization or terms of use provided by such content or service provider. Sharp shall not be liable to you or any third party for your failure to abide by such authorization or terms of use. Unless otherwise specifically authorized by the applicable content or service provider, all third party content and services provided are for personal and non-commercial use; you may not modify, copy, distribute, transmit, display, perform, reproduce, upload, publish, license, create derivative works from, transfer or sell in any manner or medium any content or services available via this device.

Sharp is not responsible, nor liable, for customer service-related issues related to the third party content or services. Any questions, comments or service-related inquiries relating to the third party content or service should be made directly to the applicable content or service provider.

You may not be able to access content or services from the device for a variety of reasons which may be unrelated to the device itself, including, but not limited to, power failure, other Internet connection, or failure to configure your device properly. Sharp, its directors, officers, employees, agents, contractors and affiliates shall not be liable to you or any third party with respect to such failures or maintenance outages, regardless of cause or whether or not it could have been avoided.

ALL THIRD PARTY CONTENT OR SERVICES ACCESSIBLE VIA THIS DEVICE IS PROVIDED TO YOU ON AN "AS-IS" AND "AS AVAILABLE" BASIS AND SHARP AND ITS AFFILIATES MAKE NO WARRANTY OR REPRESENTATION OF ANY KIND TO YOU, EITHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE OR ANY WARRANTIES OF SUITABILITY, AVAILABILITY, ACCURACY, COMPLETENESS, SECURITY, TITLE, USEFULNESS, LACK OF NEGLIGENCE OR ERROR-FREE OR UNINTERRUPTED OPERATION OR USE OF THE CONTENT OR SERVICES PROVIDED TO YOU OR THAT THE CONTENT OR SERVICES WILL MEET YOUR REQUIREMENTS OR EXPECTATIONS.

SHARP IS NOT AN AGENT OF AND ASSUMES NO RESPONSIBILITY FOR THE ACTS OR OMISSIONS OF THIRD PARTY CONTENT OR SERVICE PROVIDERS, NOR ANY ASPECT OF THE CONTENT OR SERVICE RELATED TO SUCH THIRD PARTY PROVIDERS.

IN NO EVENT WILL SHARP AND/OR ITS AFFILIATES BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, CONSEQUENTIAL OR OTHER DAMAGES, WHETHER THE THEORY OF LIABILITY IS BASED ON CONTRACT, TORT, NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR OTHERWISE AND WHETHER OR NOT SHARP AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This product includes the Opera™ browser.



- This product contains fonts provided by Monotype Imaging Inc.
- Monotype® is a trademark of Monotype Imaging Inc. registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions.
- Tioga™ is a trademark of Monotype Imaging Inc. and may be registered in certain jurisdictions.
- Letter Gothic™ is a trademark of The Monotype Corp. and may be registered in certain jurisdictions.
- iType® is a trademark of Monotype Imaging Inc. registered in the United States Patent and Trademark Office and may be registered in certain jurisdictions.
- This product contains the iType® font engine from Monotype Imaging Inc.

Other useful features

Using a USB device


The TV provides you some functions using a USB device. You can select which function to use after inserting a USB device in the USB port, and the TV starts the settings for each function.

USB usage

- Storage device for time shift
- USB media to enjoy photos, music and videos

Connecting a USB device

Connect a USB device to the TV as shown below.

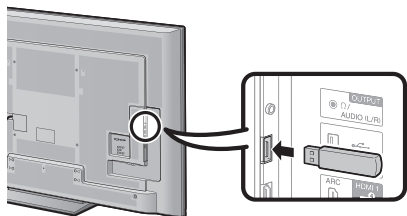

NOTE

- Some USB devices may not work properly for this function.
- Directly connect the USB storage device for time shift to the USB port.
- Do not connect and disconnect a USB device from the TV repeatedly.

Selecting USB usage

 
You need to select which function a USB device is used for when the USB device is inserted in the USB port.

- 1 Connect a USB device to one of the USB ports.
 - The screen prompt pops up.

NOTE

- If a USB storage device is inserted during time shift operation, a screen prompt will not pop up.

- 2 Select the function you want to use.
Press **◀/▶**, and then press **ENTER**.



NOTE

- When you want to configure a software update, you need to press **EXIT** to close the window.

For time shift

You need to complete the following procedure to use the USB storage device for time shift. After selecting "Time shift", the TV starts initialising the USB storage device. Follow the screen prompt to complete the setting.

- 1 Press **◀/▶** to select "Yes", and then press **ENTER**.
 - Reconfirm use of the USB storage device for time shift.

NOTE

- When you have inserted two or more USB storage devices in the ports, an error message appears. Insert only one USB storage device for time shift.
- You can also set the USB storage device to be used for time shift in the "Device registration" menu (Page 51).
- At least 1 GB is required for a USB storage device for time shift.
- A USB HDD cannot be used as a USB storage device for time shift.

- 2 Press **◀/▶** to select "Yes", and then press **ENTER**.

- The TV starts initialising the USB storage device.
- Delete the data in the USB storage device.

NOTE

- Do not disconnect the USB storage device when the TV is recognising the memory for time shift.

- 3 Select "OK".
Press **ENTER**.

NOTE

- If an error message is displayed on the screen, follow the screen prompts and remove the USB storage device.

➔ Go to **Time shift** on page 57.

For USB media

After selecting "USB media", the TV switches to the USB media.

➔ Go to **USB media/Home network** on page 52.

NOTE

- Depending on the USB device, the TV may not be able to recognise the contained data.
- Use only alphanumeric characters for naming files.
- File names over 80 characters (may vary depending on the character set) may not be displayed.
- Do not disconnect a USB device or memory card from the TV while transferring files, using the slide show function, when a screen is switching to another or before you exit "USB media" from the "INPUT" menu.

Disconnecting the USB device

When you disconnect the USB device, be sure to the following steps.

For time shift

Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Time shift setting" > "Device removal".

NOTE


- This menu item cannot be selected when a USB storage device for time shift is not registered.
- The USB storage device registration for time shift is cancelled in the following cases:
 - When the USB storage device is removed.
 - When another USB storage device is registered for time shift; only one USB device can be registered for time shift.

For USB media

Press **B** on the remote control unit while the "Photo", "Music", "Video" folder or a sub-folder is selected.

Time shift

This function enables you to pause the digital TV programme you are watching and start watching it again from the paused scene.

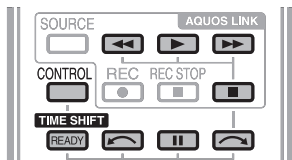

- 1 Press **READY**.
 - The TV starts temporary recording of the real time broadcast in the background.
- 2 Press **▶**.
 - The TV shows the programme from the scene that the TV started recording and the recording carries on.
 - When the TV again playbacks after once pressing **■** to stop the programme, the TV shows the programme from the stopped scene.

Buttons for time shift operation

Buttons	Description
READY	Start recording the programme you are watching. <ul style="list-style-type: none"> • You cannot playback the recorded programme until approximately three seconds after pressing READY to start recording.
▶	Playback the recorded programme.
■	Stop the programme in playback (time shift recording continues) and go back to the real time broadcast (live).
 	Pause the programme in playback (time shift recording continues). <ul style="list-style-type: none"> • This function is released in 15 minutes.
◀◀	Reverse (each time you press this button, the reverse speed changes in three levels).
▶▶	Fast forward (each time you press this button, the fast forward speed changes in three levels).
↶	Playback after jumping backwards by 10 seconds.
↷	Playback after jumping forward by 30 seconds.
CONTROL*1	Activate the control panel.
↶*2	Playback will resume after jumping backwards by the time interval you set in "Jump time setting" (Page 51).
↷*2	Playback will resume after jumping forward by the time interval you set in "Jump time setting" (Page 51).

*1 The **CONTROL** button is only available on the remote control unit.

*2 The **↶** and **↷** buttons are only available on the control panel.


NOTE

- Instead of pressing buttons on the remote control unit, most of the operations shown to the left are also available on the screen with the control panel. You can call up this control panel by pressing **CONTROL** on the remote control unit or select "Control (Time shift)" from "Option" > "Option for view".
- The control panel for time shift displays only during time shift operation.
- The "Audio description setting" menu does not work during time shift playback.
- When the amount of memory used for time shift reaches "Full" and the blue point is around the left edge of the bar (see 2 and 3 in the **Counter** section on page 50), you cannot operate some functions (|| (Pause), ◀◀ (Reverse), ↶ (Jumping backwards by 10 seconds), ↷ (Jumping backwards by the time interval you set in "Jump time setting" (Page 51))).
- Time shift recording stops if no operation detected for three hours.
- Time shift does not work for ATV, external inputs, data broadcasts and radio broadcasts.
- To release time shift, press **READY**, change the DTV channel, change "INPUT" or turn off the power of the TV.
- Time shift will be released if no operations are performed for three hours.
- Some functions do not work during time shift.
- Time shift is not actually a recording function, so the recorded data is reset when you exit time shift.
- Time shift does not work automatically, it starts only when you press **READY**.
- The password is required when you use the buttons such as ◀◀, ▶▶, ↶, ↷, ↶*2, ↷*2 if you set the password and any options for "Parental rating" except "No block" are selected.
- Time shift does not work for any copy protected programmes.
- For certain signals, resolution may be reduced during time shift playback.
- Do not disconnect the USB storage device used for time shift during time shift operation.
- The "HOME" screen cannot be displayed during Time shift.


Other useful features

Examples of time shift usage

When you move away from the TV for a while (press **READY when you move away from the TV)**

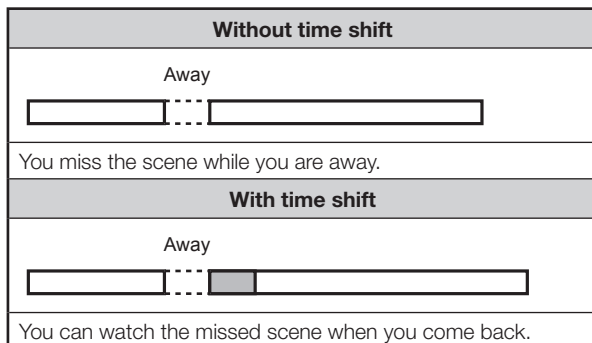


When you want to watch the same scene again (you must press **READY in advance for time shift to function)**

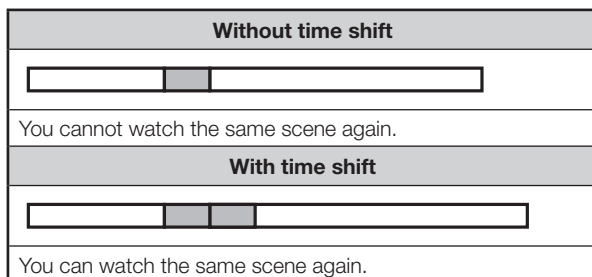

Display information regarding time shift

Channel display


Channel information displays by pressing **DISPLAY** on the remote control unit.

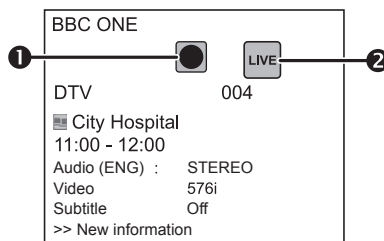

- 1 The time shift ready icon shows up when **READY** is pressed and the TV is recording the programme.
- 2 The status icon shows up depending on what is shown on the screen.

Counter

 The counter displays when you set "On" in "Display the Time shift memory" (Go to "HOME" > "TV Menu" > "Setup" > "Option" > "Time shift setting").



- 1 The grey bar shows how much memory is in use.
- 2 This blue point shows how much time has progressed.
- 3 "Full" shows up when the grey bar reaches the right edge. The TV starts overwriting the previously recorded data.

NOTE

- You can also call up the information above by pressing **CONTROL** on the remote control unit or select "Control (Time shift)" from "TV Menu" > "Setup" > "Option" > "Option for view".

Other useful features

Option **Auto input selection**

You can choose whether or not to switch the input source automatically when receiving an AQUOS LINK compatible signal on the TV during time shift operations.

Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Time shift setting” > “Auto input selection”.

Item	
Enable	Release time shift when receiving an AQUOS LINK compatible signal. Switch input source automatically.
Disable	Time shift continues to work. The TV does not switch input source automatically even when receiving an AQUOS LINK compatible signal.



Option **Jump time setting**

You can set the time interval for playback to resume after jumping backwards/forward.

Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Time shift setting” > “Jump time setting”.

- A time interval from 1 to 99 minutes can be selected.

NOTE

- You can use the time interval you set using the  or  buttons on the control panel.

Option **Device registration**

You need to perform this function to register the USB storage device for the time shift.

Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Time shift setting” > “Device registration”.

- Refer to **For time shift** (Page 48) for registering a USB storage device.

NOTE

- Only one USB storage device can be registered for time shift. Remove all USB storage devices except the one used for time shift.
- At least 1 GB is required for a USB storage device for time shift.
- A USB HDD cannot be used as a USB storage device for time shift.
- Some USB storage devices, such as ones which have multiple drives, etc., cannot be used for time shift.

Option **Device check**

You can manually check the condition of a USB storage device to be used for time shifting.

Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Time shift setting” > “Device check” > select “Yes”.

NOTE

- This menu item cannot be selected when a USB storage device for time shift is not registered.

USB media/Home network

USB media/Home network

In both modes, you can enjoy viewing photos, listening to music and watching videos from external USB devices (USB Memory, USB card reader (Mass Storage Class), USB HDD) or Home network server.

NOTE

- To connect a Home network server, refer to **Network function** (Pages 42 and 43).
- Home network function is available via Windows 7.
- Some USB devices may not work properly for this function.
- The corresponding file format is different between "USB media" and "Home network".
- "Wide mode" is fixed during "Photo mode". During "Video mode", you can select "Auto", "Original" or "Full".
- Depending on the Home network server, the TV may not be able to recognise the contained data.
- Use only alphanumeric characters for naming files.
- Do not disconnect a Home network server from the TV while transferring files, using the slide show function, when a screen is switching to another or before you exit "Home network" from the "INPUT" menu.

Selecting the mode

Common operation

Select "USB media" or "Home network" from the "HOME" screen to enter this mode.

Other operation

You can select the mode from "INPUT" menu.

• USB media

Select the USB media mode option on the screen when a USB device is connected to the TV.

Selecting modes and drives/servers

1 Press B.

USB media mode (Example)

USB1-1	USB1-2	USB2	USB3-1
USB3-2	USB3-3		

- ① Press **▲/▼** to select "Select USB drive", and then press **ENTER**.
 - The available selections are "Select USB drive" and "Folder display setting".
- ② Press **▲/▼/◀/▶** to select the USB drive where you want to find your files, and then press **ENTER**.
 - You can select from "All" or "Folder" for the type of folder directory in the "Folder display setting".

Home network mode (Example)

Server1
Server2

Press **▲/▼** to select the server where you want to find your files, and then **ENTER**.

- Press **Y** to search for servers.

2 Press ◀/▶ to select "Photo mode", "Music mode" or "Video mode", and then press ENTER.

NOTE


- **The explanations for the buttons that can be used in each mode are the explanations when using USB media mode.**

- Some operations may differ in Home network mode. Follow the on-screen instructions during operations.
- You do not need to select the drive/server in step 1 when there is only one drive in the connected USB device or there is only one Home network server connected to the TV.
 - 16 is the maximum number of drives that can be displayed in USB media mode.
 - 10 is the maximum number of servers that can be displayed in Home network mode.
 - You cannot enter these modes when there is no server connected to the TV in Home network mode.

Other useful features

Photo mode

Viewing thumbnails

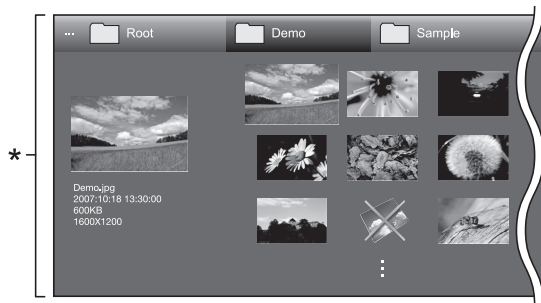

* This screen image is for the USB media mode. It may be slightly different in the Home network mode.

Buttons for thumbnail operations (When using USB media mode)

Buttons	Description
ENTER	When selecting a folder icon: Enter this directory. When selecting a photo thumbnail: Enlarge the photo.
▲/▼/◀/▶ (Cursor)	Select a desired item.
RETURN	Return to the previous operation.
R button	Select/deselect items (✓ mark appears on the selected items).
G button	All*: Select BGM for the slide show. Folder*: Move to the parent folder.
Y button	Start the slide show.
B button	Display "USB media menu". • Select slide show interval • Select slide show BGM • Set all slide show image • Reset all slide show image • USB device removal

* The mode selected in "Folder display setting"

NOTE

- When there are invalid photo files, the ✕ mark will be displayed for the file.
- You can see the file name, shooting date, file size and pixel size of the selected photo on the left of the screen (shooting date is only available in the EXIF file format).

Viewing enlarged photos

Buttons for enlarged photo display operation (When using USB media mode)

Buttons	Description
◀/▶ (Cursor)	Go to the previous/next photo in the same directory.
RETURN	Return to the thumbnail selection screen.
R button	Rotate the photo by 90 degrees to the left.
G button	Rotate the photo by 90 degrees to the right.
B button	Display "USB media menu". • USB device removal
DISPLAY	Reveal the guide display.

NOTE


- Rotating photos only applies to the temporarily selected item and this setting is not saved.

Other useful features

Slide show

Selecting the BGM

Setup the slide show BGM from “Select slide show BGM” by pressing **B** when selecting photo thumbnails. This function is available only for the USB media mode.

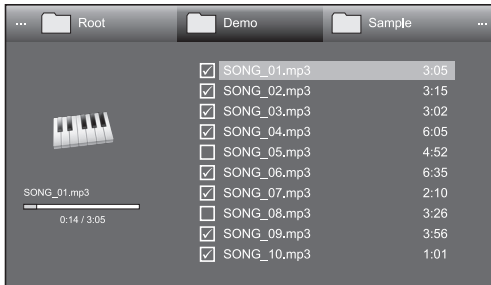

Buttons for slide show BGM select operation

Buttons	Description
ENTER	When selecting a music file: Play music.
▲/▼/◀/▶ (Cursor)	Select a desired item.
RETURN	When music is stopped: Return to the previous operation. When music is being played: Stop music.
R button	Select/deselect items (✓ mark appears on the selected items).
G button	All*: Stop music. Folder*: Move to the parent folder.
Y button	Play/pause music.
B button	Display “USB media menu”. • Set all BGM • Reset all BGM • USB device removal

* The mode selected in “Folder display setting”

NOTE

- Slide show BGM will be reset in the cases below.
 - Select “Reset all BGM” by pressing **B** during selecting music files.
 - Go back to the top menu.
 - Change the “INPUT”.
- When there are invalid music files, the **X** mark will be displayed for the file.
- The displayed play time may differ slightly from the actual play time depending on the files.

Slide show


Buttons for slide show operation (When using USB media mode)

Buttons	Description
RETURN	Return to the previous operation.
DISPLAY	Reveal/hide the guide display.
B button	Display the “USB media menu”. • Select slide show interval • USB device removal

NOTE

- The selected BGMS are played repeatedly.
- The slide show continues until you press **RETURN**.
- Depending on the photo, the slide show interval per photo may be longer than the interval selected in the settings.

Music mode

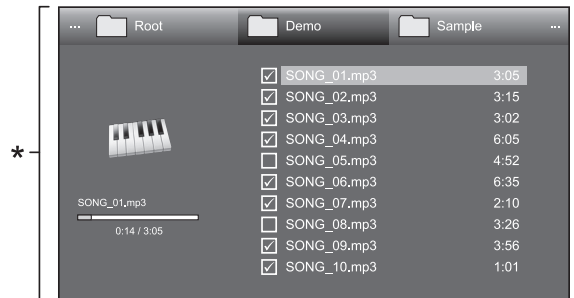

* This screen image is for the USB media mode. It may be slightly different in the Home network mode.

Buttons for music mode (When using USB media mode)

Buttons	Description
ENTER	When selecting a music file: Play music.
▲/▼/◀/▶ (Cursor)	Select a desired item.
RETURN	When music is stopped: Return to the previous operation. When music is being played: Stop music.
R button	Select/deselect items (✓ mark appears on the selected items).
G button	All*: Stop music. Folder*: Move to the parent folder.
Y button	Play/pause music.
B button	Display “USB media menu”. • Set all auto play • Reset all auto play • USB device removal

* The mode selected in “Folder display setting”

NOTE

- When there are invalid music files, the **X** mark will be displayed for the file.
- The displayed play time may differ slightly from the actual play time depending on the files.

Other useful features

Video mode




Buttons for file selecting operations (When using USB media mode)

Buttons	Description
ENTER	When selecting a folder icon: Enter this directory. When selecting a video file: Play the video.
▲/▼/◀/▶ (Cursor)	Select a desired item.
RETURN	Return to the previous operation.
R button	Select/deselect items (✓ mark appears on the selected items).
G button	All*: - Folder*: Move to the parent folder.
B button	Display the "USB media menu". • Set all auto play • Reset all auto play • USB device removal

* The mode selected in "Folder display setting"

Viewing a video

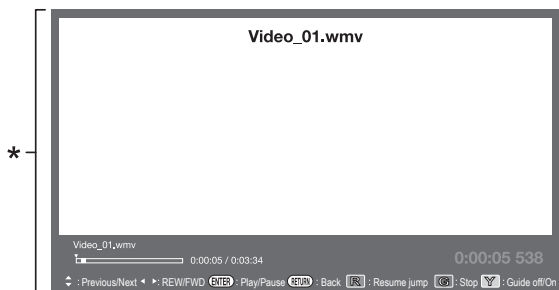

* This screen image is for the USB media mode. It may be slightly different in the Home network mode.

Buttons for playing mode (When using USB media mode)

Buttons	Description
ENTER	When video is being played: Pause the video. When video is paused: Play the video.
▲ (Cursor)	Go to the beginning of a file by pressing ▲ once and the previous file by pressing ▲ twice.
▼ (Cursor)	Go to the next file.
◀/▶ (Cursor)	Reverse/fast forward a video.


Buttons	Description
RETURN	Go back to the file selection screen.
R button	Start playback from the previously stopped scene.* ¹
G button	Stop a video.
CONTROL or Y button	Display the USB control panel.
B button	Display "USB media menu". • Title (edition) • Chapter • Show video information • USB device removal
0-9	Jump to scenes at 10% increments (0%–90%). • Limited to files without chapters.
DISPLAY	Reveal/hide the guide display.

*¹ This function is available only for the USB media mode.

Control panel

Press **CONTROL** or **Y** button and the control panel displays and operations for video playback will be available.*

* This screen image is for the USB media mode. It may be slightly different in the Home network mode.

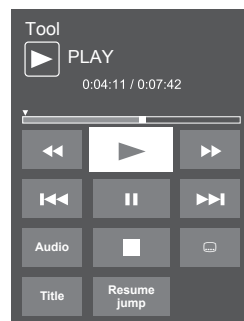

◀◀	Video without chapters: Press one time to return to the previous playback point.* Press two times to return to the previous file. Video with chapters: Press one time to return to the previous chapter. Press two times to return to the previous file.
▶▶	Video without chapters: Press one time to advance to the next playback point.* Press two times to display the next file. Video with chapters: Press one time to return to the previous chapter. Press two times to return to the previous file.

NOTE

- * During playback of a file without chapters, playback points are set automatically. Playback points are set at intervals of a one-tenth of playback time.
- The key guide is shown when playback is resumed.
- You can also display the control panel by selecting "Control (USB media)" or "Control (Home network)" from "Option" > "Option for view".
- Reverse/fast forward continues from one file to another during continuous playback in the USB media mode. Jump forward/back may not be available depending on the files in the Home network mode.


Other useful features

Selecting the picture size for video mode

You can select the picture size in “Video mode”.

- 1 Select “Video mode”.
 - Refer to **Selecting modes and drives/servers** on page 52.
- 2 Press **WIDE**.
 - The “Wide mode” menu displays.
- 3 Press **WIDE** or **▲/▼** to select the desired item.
 - As you toggle the options, each is immediately reflected on the screen. There is no need to press **ENTER**.

EXAMPLE

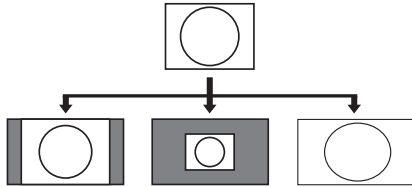

Item	
Auto	Keeps the original aspect ratio in a enlarged screen display.
Original	Keeps the original aspect ratio and size.
Full	An image fully fills the screen.



This is the function to confirm your registration code. You need to register the code at www.divx.com.

Go to “HOME” > “TV Menu” > “Setup” > “View setting” > “DivX® setup”.

● DivX® VOD registration

You can find your registration code on this menu. You need to register the TV at www.divx.com before playing the DivX content.

● DivX® VOD deregistration

You can find your deregistration code on this menu. You need to deregister the TV at www.divx.com to release the registration.

USB device compatibility

USB device	USB memory, USB card reader (Mass Storage class), USB HDD
File system	FAT/FAT32/NTFS
Photo file format	JPEG (.jpg) (DCF2.0 compliant)
Music file format	MP3 (.mp3) Bitrate: 32 k, 40 k, 48 k, 56 k, 64 k, 80 k, 96 k, 112 k, 128 k, 160 k, 192 k, 224 k, 256 k, 320 kbps Sampling frequency: 32 k, 44.1 k, 48 kHz

Video file format			
File extension	Container	Video	Audio
.avi	AVI	DivX 3.11/4.x/5.1/6.0 XviD H.264 MPEG4 Motion Jpeg	MP3 Dolby Digital LPCM ADPCM
.mkv	MKV	DivX 3.11/4.x/5.1/6.0 XviD H.264 MPEG4	MP3 Dolby Digital LPCM ADPCM
.asf .wmv	ASF	DivX 3.11/4.x/5.1/6.0 XviD MPEG4 VC-1 Windows Media Video V9	MP3 Dolby Digital LPCM WMA
.mp4 .mov	MP4	H.264 MPEG4 Motion Jpeg	MP3 AAC
.mpg .mpeg	PS	MPEG2 MPEG1	Dolby Digital MPEG LPCM

NOTE

- Progressive format jpeg files are not supported.
- Files in USB 1.1 devices may not be played properly.
- Operation using USB hubs is not guaranteed.
- Some video file formats may not be played depending on the file.
- Files may not be playable depending on the bitrate.
- Some USB devices may not work properly depending on the file system.

Home network server compatibility

Photo file format	JPEG
Music file format	LPCM, MP3
Video file format	MPEG2-PS, MPEG2-TS, WMV, ASF, MP4, MOV, AVI

NOTE

- Progressive format jpeg files are not supported.
- Some video file formats may not be played depending on the file and server.

Connecting a PC

Connecting a PC


HDMI connection

PC HDMI 1, 2, 3 or 4 terminals



① HDMI-certified cable

PC HDMI 2 terminal*

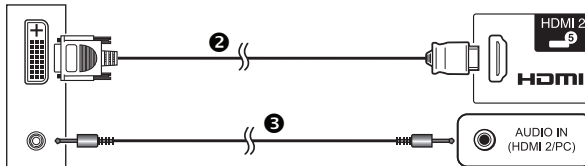


② DVI/HDMI cable

③ ø 3.5 mm stereo minijack cable

* When using the HDMI 2 terminal, you must select the proper item in the "Audio select" menu depending on the type of HDMI cable connected (refer to page 39 for details).

Analogue connection


PC PC terminal*

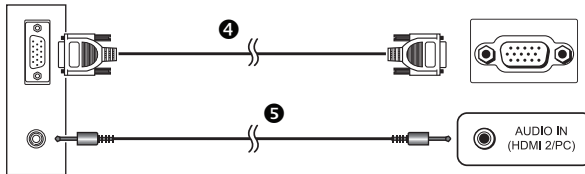

④ RGB cable

⑤ ø 3.5 mm stereo minijack cable

PC PC terminal*

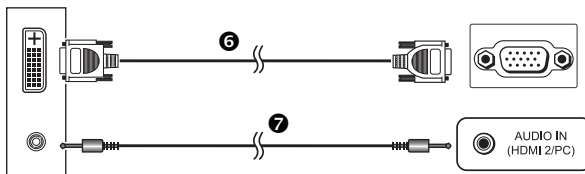

⑥ DVI/RGB conversion cable ⑦ ø 3.5 mm stereo minijack cable

* When using the PC terminal, you must select "Video + Audio" in the "Audio select" menu (refer to page 39 for details).

NOTE

- The PC input terminals are DDC 2B-compatible.
- Refer to page 58 for a list of PC signals compatible with the TV.

 
 
Displaying a PC image on the screen

Selecting the picture size





You can select the picture size.

- 1 Press **WIDE**.
 - The "Wide mode" menu displays.
- 2 Press **WIDE** or **▲/▼** to select the desired item.

EXAMPLE

Input signal	 1024 × 768	 1360 × 768
--------------	--	---

 

Normal		Keeps the original aspect ratio in a full screen display.
Cinema		For viewing wide screen programmes. The top and bottom of the image is slightly cropped (only 1024 × 768 signals).
Full		An image fully fills the screen.
Dot by Dot		Detects the resolution of the signal and displays an image with the same number of pixels on the screen.

NOTE

- You can also select an item from "Setup" > "Option" > "Option for view" > "Wide mode".
- Connect the PC before making adjustments.
- Selectable picture size may vary with input signal type.
- Refer to page 38 for AV signals.
HDMI: 480i/480p/576i/576p/720p/1080i/1080p
ANALOGUE RGB: 576p/720p (50 Hz)/1080i
- The PC terminal is not compatible with 480i/576i/1080p signals.

Connecting a PC

Adjusting the PC image automatically



Option

Auto sync.

This function enables the screen to be automatically adjusted to its best possible condition when the analogue terminals of the TV and PC are connected with a commercially available DVI/RGB conversion cable, etc.

- 1 Press **INPUT** to select “PC” from the “INPUT” menu, and then press **ENTER**.
- 2 Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Terminal setting” > “PC signal setting” > “Auto sync.”.

NOTE

- When “Auto sync.” is successful, “Auto Sync completed successfully” displays. If not, “Auto sync.” failed.
- “Auto Sync.” is likely to succeed when an input PC image has wide vertical stripes (e.g. pattern with high contrast stripes, or cross-hatched). It may fail when an input PC image is solid (low contrast).
- “Auto sync.” may fail even if “Auto Sync completed successfully” displays.
- “Auto sync.” may fail if the PC image has low resolution, has unclear (black) edges, or is moved while executing “Auto sync.”.
- Be sure to connect the PC to the TV and switch it on before starting “Auto sync.”.
- “Auto sync.” can be executed only when inputting analogue signals through the PC terminal.

Adjusting the PC image manually



Option

Fine sync.

Ordinarily you can easily adjust the picture as necessary to change image position using “Auto sync.”. In some cases, however, manual adjustment is needed to optimise the image.

- 1 Press **INPUT** to select “PC” from the “INPUT” menu, and then press **ENTER**.
- 2 Go to “HOME” > “TV Menu” > “Setup” > “Option” > “Terminal setting” > “PC signal setting” > “Fine sync.”.
- 3 Press **▲/▼** to select the specific adjustment item.
- 4 Press **◀/▶** to adjust the item to the desired position.

Item	
H-Pos.	Centres the image by moving it to the left or right.
V-Pos.	Centres the image by moving it up or down.
Clock	Adjusts when the image flickers with vertical stripes.
Phase	Adjusts when characters have low contrast or when the image flickers.

NOTE

- For resetting all adjustment items to the factory preset values, press **▲/▼** to select “Reset”, and then press **ENTER**.
- “Clock” and “Phase” in the “Fine sync.” menu can be adjusted only when inputting analogue signals through the PC terminal.
- Images may not be displayed properly depending on the settings and/or input signals.

PC compatibility chart

Resolution		Horizontal frequency	Vertical frequency	Analogue (D-Sub)	Digital (HDMI)	VESA standard
VGA	640 x 480	31.5 kHz	60 Hz	✓	✓	✓
SVGA	800 x 600	37.9 kHz	60 Hz	✓	✓	✓
XGA	1,024 x 768	48.4 kHz	60 Hz	✓	✓	✓
WXGA	1,360 x 768	47.7 kHz	60 Hz	✓	✓	✓
SXGA	1,280 x 1,024	64.0 kHz	60 Hz	✓	✓	✓
SXGA+	1,400 x 1,050	65.3 kHz	60 Hz	✓	✓	✓
UXGA	1,600 x 1,200	75.0 kHz	60 Hz	✓	✓	✓
1080p	1,920 x 1,080	67.5 kHz	60 Hz	✓	✓	

VGA, SVGA, XGA, WXGA, SXGA, SXGA+ and UXGA are registered trademarks of International Business Machines Corporation.

NOTE

- This TV has only limited PC compatibility, correct operation can only be guaranteed if the video card conforms exactly to the VESA 60 Hz standard. Any variations from this standard will result in picture distortions.

Connecting a PC


PC control of the TV

- When a programme is set, the TV can be controlled from the PC using the RS-232C or IP. The input signal (PC/video) can be selected, the volume can be adjusted and various other adjustments and settings can be made, enabling automatic programmed playing.
- Use an RS-232C serial control cable (cross type), ETHERNET cable (commercially available) or wireless LAN USB adapter for the connections.

NOTE

- This PC control should be used by a person who is accustomed to using PCs.

Communication conditions for IP

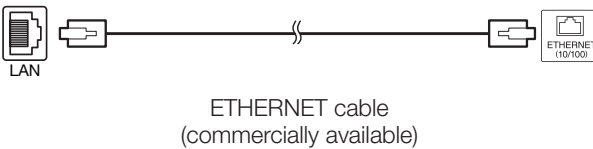

Connect to the TV with the following settings made for IP on the PC.

IP protocol	TCP/IP
Host IP address	Set the IP address on the TV menu.
Service	None (do not select Telnet or SSH).
TCP port#	Set a port number on the TV menu (Control port).

When you set your ID and password on the TV menu, you need to enter them as soon as you connect to the TV.

NOTE


- The connection will be cut off when there has been no communication for 3 minutes.

View setting

IP Control setup

- Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Network setup" > "IP Control setup" > select "Change".
- To use IP Control, select "Enable".
- Set the device name.
- Set your login ID and password.
- Set the port to use with IP Control.
- Confirm the settings, and press ◀/▶ to select "OK" and then press **ENTER**.

Communication conditions for RS-232C

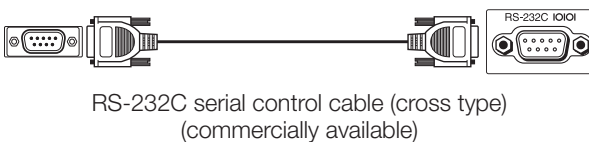

Set the RS-232C communications settings on the PC to match the TV's communications conditions. The TV's communications settings are as follows:

Baud rate	9,600 bps
Data length	8 bits
Parity bit	None
Stop bit	1 bit
Flow control	None

Communication procedure

Send the control commands from the PC via the RS-232C connector.

 
The TV operates according to the received command and sends a response message to the PC.

Do not send multiple commands at the same time. Wait until the PC receives the OK response before sending the next command.

Make sure to send "A" with the carriage return and confirm that "ERR" returns before operating.

Command format

Eight ASCII codes +CR




- Command four digits: Command. The text of four characters.
- Parameter four digits: Parameter 0-9, blank, ?, minus
- Return code (0DH): ↵


Parameter

Input the parameter values, aligning left, and fill with blank(s) for the remainder (be sure that four values are input for the parameter).

When the input parameter is not within an adjustable range, "ERR" returns (refer to "Response code format").

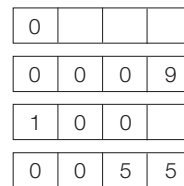

 When "?" is input for some commands, the present setting value responds.



Response code format

Normal response



Return code (0DH)

Problem response
(communication error or incorrect command)



Return code (0DH)

Connecting a PC

Command list

CONTROL ITEM	COMMAND	PARAMETER	CONTROL CONTENTS
POWER SETTING	P O W R 0 _ _ _		POWER OFF (STANDBY)
INPUT SELECTION	I T G D _ _ _ _		INPUT SWITCHING (TOGGLE)
	I T V D _ _ _ _		ATV (CHANNEL FIXED)
	I D T V _ _ _ _		DTV (CHANNEL FIXED)
	I A V D * _ _ _		INPUT 1-3 (1-3), HDMI 1-4 (4-7), PC (8)
CHANNEL	D C C H * * _ _		TV DIRECT CHANNEL (1-99)
	C H U P _ _ _ _		CHANNEL UP
	C H D W _ _ _ _		CHANNEL DOWN
	D T V D * * * _		DTV DIRECT CHANNEL (1-999)
	D T U P _ _ _ _		DTV CHANNEL UP
	D T D W _ _ _ _		DTV CHANNEL DOWN
	A V M D 0 _ _ _		TOGGLE
AV MODE SELECTION	A V M D 1 _ _ _		STANDARD
	A V M D 2 _ _ _		MOVIE
	A V M D 3 _ _ _		GAME
	A V M D 4 _ _ _		USER
	A V M D 5 _ _ _		DYNAMIC (Fixed)
	A V M D 6 _ _ _		DYNAMIC
	A V M D 7 _ _ _		PC
	A V M D 8 _ _ _		x.v.Colour
	VOLUME	V O L M * * _ _	
POSITION	H P O S * * * _		H-POSITION (AV/PC) (-nn- <u>nn</u>)
	V P O S * * * _		V-POSITION (AV/PC) (- <u>nn</u> - <u>nn</u>)
	C L C K * * * _		CLOCK (0-180)
	P H S E * * _ _		PHASE (0-40)
WIDE MODE	W I D E 0 _ _ _		TOGGLE (AV)
	W I D E 1 _ _ _		NORMAL (AV)
	W I D E 2 _ _ _		ZOOM 14:9 (AV)
	W I D E 3 _ _ _		PANORAMA (AV)
	W I D E 4 _ _ _		FULL (AV/USB - Video/ Home network - Video)
	W I D E 5 _ _ _		CINEMA 16:9 (AV)
	W I D E 6 _ _ _		CINEMA 14:9 (AV)
	W I D E 7 _ _ _		NORMAL (PC)
	W I D E 8 _ _ _		CINEMA (PC)
	W I D E 9 _ _ _		FULL (PC)
	W I D E 1 0 _ _		DOT by DOT (AV/PC)
	W I D E 1 1 _ _		UNDERSCAN (AV/PC)
	W I D E 1 2 _ _		AUTO (USB-Video/Home network-Video)
	W I D E 1 3 _ _		ORIGINAL (USB-Video/ Home network-Video)


CONTROL ITEM	COMMAND	PARAMETER	CONTROL CONTENTS
MUTE	M U T E 0 _ _ _		TOGGLE
	M U T E 1 _ _ _		MUTE
	M U T E 2 _ _ _		MUTE OFF
SRS TS HD	A C S U 0 _ _ _		SRS TS HD TOGGLE
	A C S U 1 _ _ _		SRS TS HD ON
	A C S U 2 _ _ _		SRS TS HD OFF
AUDIO CHANGE	A C H A _ _ _ _		TOGGLE
SLEEP TIMER	O F T M 0 _ _ _		OFF
	O F T M 1 _ _ _		SLEEP TIMER 30 MIN
	O F T M 2 _ _ _		SLEEP TIMER 1 HOUR
	O F T M 3 _ _ _		SLEEP TIMER 1 HOUR 30 MIN
	O F T M 4 _ _ _		SLEEP TIMER 2 HOUR
	O F T M 5 _ _ _		SLEEP TIMER 2 HOUR 30 MIN
	TELETEXT	T E X T 0 _ _ _	
T E X T 1 _ _ _			TELETEXT ON (TOGGLE)
D C P G * * * _			DIRECT PAGE JUMP (100-899)
DEVICE NAME	T V N M 1 _ _ _		DISPLAY THE DEVICE NAME
MODEL NAME	M N R D 1 _ _ _		DISPLAY THE MODEL NAME
SOFTWARE VERSION	S W V N 1 _ _ _		DISPLAY THE SOFTWARE VERSION
IP PROTOCOL VERSION	I P P V 1 _ _ _		DISPLAY THE IP PROTOCOL VERSION

NOTE

- If an underbar () appears in the parameter column, enter a space.
- If an asterisk (*) appears, enter a value in the range indicated in brackets under CONTROL CONTENTS.

Appendix

Troubleshooting

Problem	Possible solution
<ul style="list-style-type: none"> No power. 	<ul style="list-style-type: none"> Is the AC cord disconnected? Check if you pressed POWER on the TV. When the power switch does not work, remove the power plug and insert it again, and press POWER on the TV after waiting more than five seconds.
<ul style="list-style-type: none"> The TV cannot be operated. 	<ul style="list-style-type: none"> External influences such as lightning, static electricity, etc., may cause improper operation. In this case, operate the TV after first turning off the power, or unplugging the AC cord and re-plugging it in after one or two minutes.
<ul style="list-style-type: none"> Remote control unit does not operate. 	<ul style="list-style-type: none"> Are batteries inserted with polarity (+, -) aligned? Are batteries worn out? (Replace with new batteries.) Are you using it under strong or fluorescent lighting? Is a fluorescent light illuminating to the remote control sensor?
<ul style="list-style-type: none"> Picture is cut off. 	<ul style="list-style-type: none"> Is the image position correct? Are screen mode adjustments (Wide mode) such as picture size made correctly? (Pages 38–39, 56 and 57)
<ul style="list-style-type: none"> Strange colour, light colour, or dark colour, or colour misalignment. 	<ul style="list-style-type: none"> Adjust the picture tone (Pages 30–31). Is the room too bright? The picture may look dark in a room that is too bright. Check the “Colour system” setting (Pages 35 and 40). Check the “HDMI auto view” setting (Page 40).
<ul style="list-style-type: none"> Power is suddenly turned off. 	<ul style="list-style-type: none"> The TV’s internal temperature has increased. Remove any objects blocking the vent or clean. Is the “Sleep timer” set? Select “Off” from the “Sleep timer” menu (Page 33). Is “No signal off” or “No operation off” activated? (Page 33)
<ul style="list-style-type: none"> No picture. 	<ul style="list-style-type: none"> Are connections to external equipment correct? (Pages 24–26) Is the correct input source selected? (Page 16) Is a non-compatible signal being input? (Page 58) Is the picture adjustment correct? (Pages 30–31) Is the antenna connected properly? (Page 8) Is “On” selected in “Audio only”? (Page 33)
<ul style="list-style-type: none"> No sound. 	<ul style="list-style-type: none"> Is the volume too low? Make sure that headphones are not connected. Check if you pressed  on the remote control unit. Is the proper item selected in the “Audio select” menu when connecting devices to the HDMI 2 terminal or the PC terminal? (Pages 25, 39 and 57)
<ul style="list-style-type: none"> The TV sometimes makes a cracking sound. 	<ul style="list-style-type: none"> This is not a malfunction. This happens when the cabinet slightly expands and contracts according to changes in temperature. This does not affect the TV’s performance.
<ul style="list-style-type: none"> AQUOS.NET top page cannot be displayed. 	<ul style="list-style-type: none"> Is the ETHERNET cable connected correctly? (Page 42) Check the settings of “Network setup” (Pages 42–43).
<ul style="list-style-type: none"> Some Internet functions used on a PC are not available from the TV. 	<ul style="list-style-type: none"> The TV has only limited functions compared with regular PC browsers (Page 46).

Troubleshooting – digital broadcasting

Problem	Error code	Possible solution
<ul style="list-style-type: none"> No picture or no sound. 	—	<ul style="list-style-type: none"> Is the correct input source selected? (Page 16)
<ul style="list-style-type: none"> Block noise appears on the screen. 	—	<ul style="list-style-type: none"> Is the antenna pointing in the correct direction? Check the “Signal strength” and “Quality” (Page 14). Are physical objects blocking the antenna? Is the antenna or antenna cable compatible with DTV broadcast?
<ul style="list-style-type: none"> DTV broadcasts cannot be received. 	E202	<ul style="list-style-type: none"> Is the DTV antenna set up properly? Is the antenna cable connected properly? (Page 8) Is the channel settings correct? (Page 14)
<ul style="list-style-type: none"> A specific channel cannot be received. 	—	<ul style="list-style-type: none"> Check the “Signal strength” and “Quality” (Page 14).
<ul style="list-style-type: none"> No broadcast now 	E203	<ul style="list-style-type: none"> Check the current broadcast.

NOTE

- As a precautionary measure, make a note of your password above, remove it from this manual, and keep it in a familiar place.

Reset

If complex adjustments are made so that the settings cannot be restored to normal, you can reset the settings to the factory preset values.

- 1 Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Reset".
- 2 If you have already set the password, enter it here.
- 3 Press ◀/▶ to select "Yes", and then press **ENTER**.
 - "Now, TV will restart automatically, OK?" displays on the screen.
- 4 Press ◀/▶ to select "Yes", and then press **ENTER**.
 - "Now initialising..." displays on the screen and blinks.
 - After the reset has completed, the power shuts off and then comes back on. The screen will have returned to its original settings.
- 5 Press ▲/▼ to select the desired language listed on the screen, and then press **ENTER**. Press ◀/▶ to select "HOME" or "STORE", and then press **ENTER**.
- 6 Setting the country. Press ▲/▼ to select your country or area, and then press **ENTER**.
 - This setting screen only appears during the initial auto installation.
- 7 The TV searches for and stores all the receivable TV stations according to their settings and the connected antenna.
 - To abort the initial auto installation in progress, press **RETURN**.

NOTE

- When the TV is in "STORE" mode, repeat steps 1 to 5 to change to "HOME" mode.

Updating your TV via DVB-T

Ensure that your TV software version is always up to date. From time to time SHARP will make updated TV base software and DVB software available.



Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Individual setting" > "Standby search" > "Download setup".

Searching for updates

The TV automatically determines whether a new software version is available when the TV is in standby mode.

Item	
Yes	Automatically searches for new software updates available when the TV is in standby mode.
No	Does not search for update information.
Now	Lowers image brightness for easier viewing. Checks if there is new software immediately.

Downloading the software

You can select the method of update.

- 1 If the software is updated, the confirmation message "New download information has been detected." appears.
 - If the TV receives the update service while in standby mode, a confirmation message displays after turning on the power.
- 2 Follow the screen prompts.

Item	
Yes	Starts downloading immediately. It takes approximately one hour to update. You cannot carry out other operations while downloading. <ul style="list-style-type: none"> • Cancels the download by pressing ENTER on the remote control unit when "Discontinue" is displayed on the screen during the update.
No	Starts downloading automatically several minutes after entering standby mode.

NOTE

- Do not unplug the AC cord while receiving the data, otherwise it will not be captured properly.
- Updating the software may take some time.

Getting information



Information

Message list

When new software is detected, you can confirm the update information and download the software from "Message list".

Go to "HOME" > "TV Menu" > "Setup" > "Information" > "Message list".

NOTE

- When the TV succeeds at downloading new software, the message is updated in the "Message list" of the "Information" menu.
- The software update will not be carried out if there is no new software available at the specified download time.



Information

Receiver report

Display reports regarding failures and changes for timer settings.

Go to "HOME" > "TV Menu" > "Setup" > "Information" > "Receiver report".



Information

Identification

You can check the TV ID on the screen for reporting to customer service.

Go to "HOME" > "TV Menu" > "Setup" > "Information" > "Identification".

Updating your TV via USB/Network




Information

Software update

This function allows you to update to the latest software via a USB device or network.

- 1 Go to "HOME" > "TV Menu" > "Setup" > "Information" > "Software update" > "USB update".
 - You can also update the software through the network. Go to "HOME" > "TV Menu" > "Setup" > "Information" > "Software update" > "Network update" and follow the on-screen instruction.
 - A broadband connection and Network setup are required to update the software using the internet (Pages 42-43).
- 2 Press **ENTER** and then insert the USB device containing the software update file.

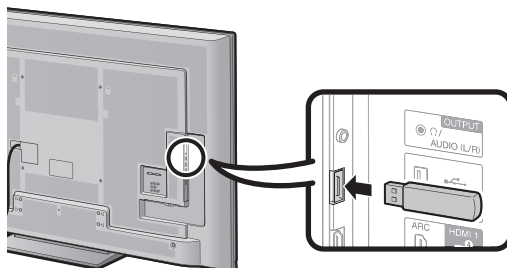

CAUTION

- Be sure to insert the USB device correctly into the terminal.

- 3 Press **EXIT** to close the window when a screen prompt pops up.
- 4 The TV displays a confirmation screen while checking the data in the inserted USB device.

CAUTION

- If the data is not compatible with the system, an error message appears on the screen. Repeat steps 2 and 3 after pressing **ENTER**.
- When an error message displays, check to see if:
 - The USB device is inserted firmly.
 - The USB memory has two or more software update files.
 - No data for updating the system exists in the USB memory.
 - The software update file is broken.
 - The software update file is not compatible with your TV's software.
 - The current system is same as the system update data.

- 5 The TV displays the software version information after checking the data.
- 6 Press **◀/▶** to select "Yes" to update the system, and then press **ENTER**.
- 7 The TV restarts automatically, and the software update will be complete.
 - This operation may take a while.

Information on the software licence for this product

Software licence

You can read the software licences in this menu.

Go to “HOME” > “TV Menu” > “Setup” > “Information” > “Software licence”.

● Software composition


The software included in this product is comprised of various software components whose individual copyrights are held by SHARP or by third parties.

Warning regarding basic use

Cautions regarding use in high and low temperature environments

- When the TV is used in a low temperature space (e.g., room, office), the picture may leave trails or appear slightly delayed. This is not a malfunction, and the TV will recover when the temperature returns to normal.
- Do not leave the TV in a hot or cold location. Also, do not leave the TV in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the LCD panel to malfunction.
Storage temperature: - 20°C to + 60°C.

Trademarks

TruSurround HD, SRS and  symbol are trademarks of SRS Labs, Inc.
TruSurround HD technology is incorporated under license from SRS Labs, Inc.

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

“HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.”

Products that have earned the ENERGY STAR® are designed to protect the environment through energy efficiency.

DivX®, DivX Certified®, DivX Plus® HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.
ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

LCフォント、LCFONT、エルシーフォント and LC logo mark are registered trademarks of SHARP Corporation.
This product is embedded with LC Font technology, which was developed by SHARP Corporation for clearly displaying easy-to-read characters on an LCD screen. However, other non-LCD fonts are used for displaying some screen pages.

“x.v.Colour” and **x.v.Colour** are trademarks of Sony Corporation.

DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

Contains Adobe® Flash® Lite® by Adobe Systems Incorporated. Adobe Flash Lite Copyright© 2003-2011 Adobe System Incorporated. All rights reserved.
Adobe Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

YouTube and the YouTube logo are trademarks of Google Inc.

All other company or product names are trademarks or registered trademarks of their respective companies.

Specifications

Item		LC-70LE735X	
Resolution		1,920 x 1,080	
Video colour system		PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60	
TV function	TV-standard	Analogue	PAL (B/G, D/K, I), SECAM (B/G, D/K, K/K1), NTSC:(M)
		Digital	DVB-T
	Receiving channel	VHF/UHF	44.25–863.25 MHz
	TV tuning system	Auto preset 02ch/07ch/09ch/10ch/28ch at Australia.	
STEREO/BILINGUAL		NICAM (B/G, I, D/K), A2 stereo (B/G), BTSC	
Audio amplifier		10 W x 2	
Speaker		(3.4 cm x 15 cm) x 2	
Terminals	ANT (Antenna input)		UHF/VHF 75 Ω Din type
	RS-232C		D-Sub 9 pin male connector
	INPUT 1		VIDEO in, AUDIO in
	INPUT 2		VIDEO in, AUDIO in
	INPUT 3		AUDIO in, COMPONENT in (480I, 576I, 480P, 576P, 720P/50 Hz, 720P/60 Hz, 1080I/50 Hz, 1080I/60 Hz)
	HDMI 1 (INPUT 4) (ARC)		HDMI (HDMI input) (480I, 576I, 480P, 576P, 720P/50 Hz, 720P/60 Hz, 1080I/50 Hz, 1080I/60 Hz, 1080P/50 Hz, 1080P/60 Hz, 1080P/24 Hz)
	HDMI 2 (INPUT 5)		HDMI (HDMI input) (480I, 576I, 480P, 576P, 720P/50 Hz, 720P/60 Hz, 1080I/50 Hz, 1080I/60 Hz, 1080P/50 Hz, 1080P/60 Hz, 1080P/24 Hz), AUDIO in (shared usage with PC) (Ø 3.5 mm jack)
	HDMI 3 (INPUT 6)		HDMI (HDMI input) (480I, 576I, 480P, 576P, 720P/50 Hz, 720P/60 Hz, 1080I/50 Hz, 1080I/60 Hz, 1080P/50 Hz, 1080P/60 Hz, 1080P/24 Hz)
	HDMI 4 (INPUT 7)		HDMI (HDMI input) (480I, 576I, 480P, 576P, 720P/50 Hz, 720P/60 Hz, 1080I/50 Hz, 1080I/60 Hz, 1080P/50 Hz, 1080P/60 Hz, 1080P/24 Hz)
	PC (INPUT 8)		15 pin mini D-sub, AUDIO in (shared usage with HDMI 2) (Ø 3.5 mm jack)
	USB 1		USB (type A)
	USB 2 (HDD)		USB (type A)
	USB 3 (WIRELESS LAN)		USB (type A)
	ETHERNET (10/100 BASE-T)		Network connector
	AUDIO IN (HDMI 2/PC)		Ø 3.5 mm jack*1
	DIGITAL AUDIO OUTPUT		Optical S/PDIF digital audio output
OUTPUT/Headphones		Ø 3.5 mm jack (audio output)	
OSD language		English/Simplified Chinese/Arabic/Persian/French/Indonesian	
Power requirement		AC 110–240 V, 50/60 Hz	
Power consumption (method IEC62087)		240 W (0.3 W Stand by)	
Weight	With Stand	42.5 kg	
	Without Stand	40.0 kg	
Operating temperature		0°C to + 40°C	

*1 The HDMI 2 and PC terminals can both use the same audio input terminal.

- As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Removing the stand

For wall mounting with the optional bracket (AN-52AG4) remove the stand.


Before setting TV on the wall

- Remove the connected cables (DVD, VCR, etc) from the terminals.
- Before performing work, make sure to turn off the TV.
- Before performing work spread cushioning over the base area to lay the TV on. This will prevent it from being damaged.


NOTE

- To attach the stand, perform the above steps in reverse order.
- As the TV is very heavy, be careful when moving it.

- 1** Unfasten the screws at the 4 locations on the rear of the stand.

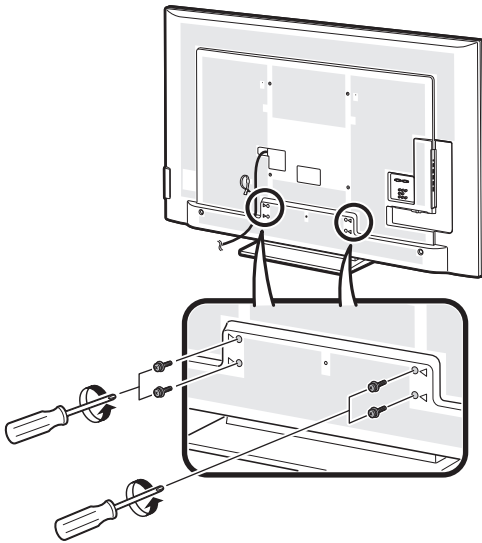


- 2** Detach the stand from the TV (hold the stand so it will not drop from the edge of the base area).

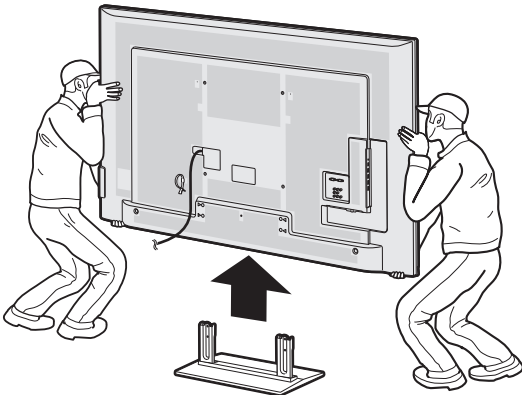

Mounting the TV on a wall


To use this TV mounted on a wall, remove the cord holders and the screws at the 4 locations on the rear of the TV, and then use the screws supplied with the wall mount bracket to secure the bracket to the rear of the TV.

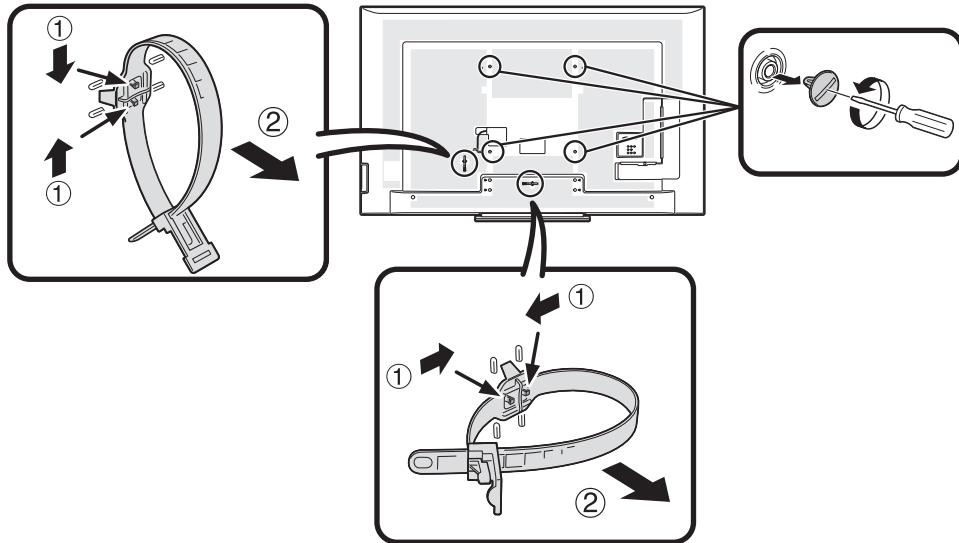

- This TV should be mounted on a wall only with the wall mount bracket available from SHARP (Page 5). The use of other wall mount brackets may result in an unstable installation and may cause serious injuries.
- Mounting the LCD colour TV requires special skills and should only be performed by qualified service personnel. Customers should not attempt to do the work themselves. SHARP bears no responsibility for improper mounting or mounting that results in accident or injury.
- You can ask qualified service personnel about using an optional bracket to mount the TV to a wall.
- When you mount the TV on a wall, you should attach the supporting post.
- Detach the cord holders on the rear of the TV before mounting the TV on a wall.

Hanging on the wall

AN-52AG4 wall mount bracket (see the bracket instructions for details).

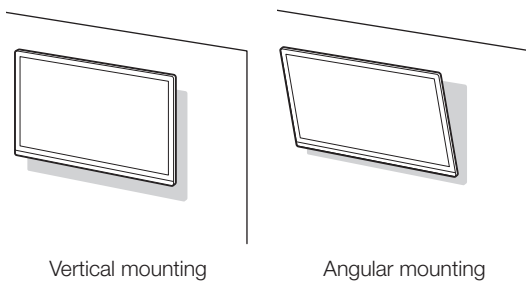

Vertical mounting

Angular mounting

About setting the TV angle




AN-52AG4

● Wall mount audio setup

When you mount the TV on a wall, you can adjust the sound to a more suitable one by setting this function to "Yes".
Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Wall mount audio setup".

Dimensional drawings

LC-70LE735X

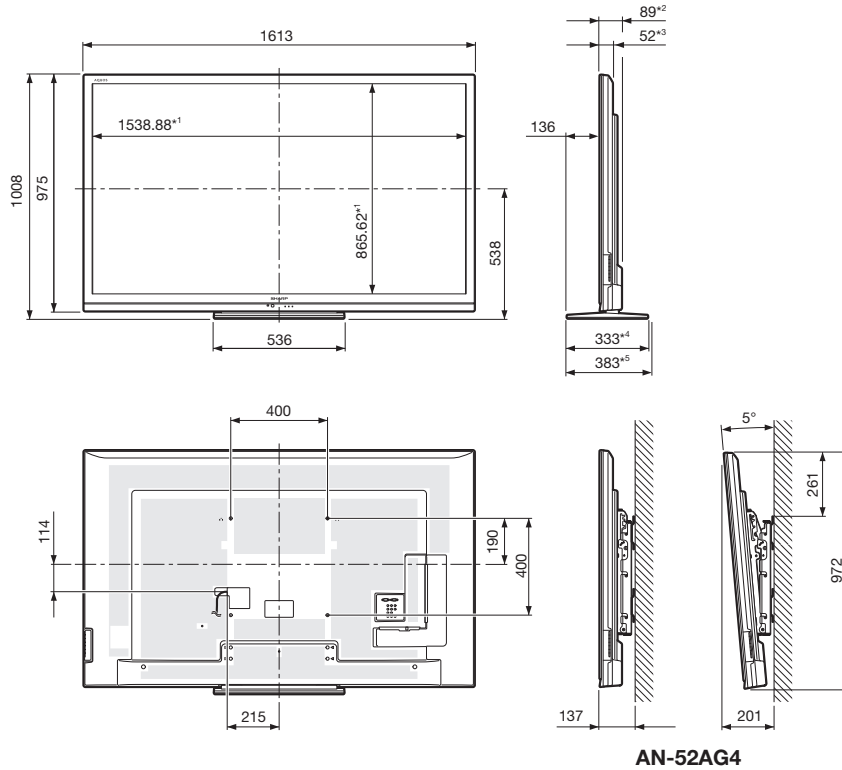

AN-52AG4

- *1 Active area
- *2 Including projecting part
- *3 Thinnest part
- *4 Including tip prevention brackets when stored
- *5 Including tip prevention brackets when attached

NOTE

- Dimensions do not include protrusions such as screws and some parts.

CLEARING THE PASSWORD

- 1 Go to "HOME" > "TV Menu" > "Setup" > "View setting" > "Individual setting" > "Password".
- 2 The password input screen displays.
- 3 Press and hold both **CH/∧** and **VOL+** on the TV simultaneously until the message appears on the screen.

NOTE

- To set the password again, refer to **Password** on page 36 and follow the instructions.



The Password is

--	--	--	--

NOTE

- As a precautionary measure, make a note of your password above, remove it from this manual, and keep it in a familiar place.

SHARP

FOR LOCATION ENQUIRIES WITHIN

AUSTRALIA

REGARDING YOUR LOCAL

SHARP APPROVED SERVICE CENTRE

VISIT OUR WEBSITE AT

www.sharp.net.au

OR CALL SHARP CUSTOMER CARE

1300 135 022

(LOCAL CALL COST APPLY WITHIN AUSTRALIA)

SHARP CORPORATION OF AUSTRALIA PTY LTD

SHARP

FOR LOCATION ENQUIRIES WITHIN

NEW ZEALAND

REGARDING YOUR LOCAL

SHARP APPROVED SERVICE CENTRE

VISIT OUR WEBSITE AT

www.sharp.net.nz

CONTACT YOUR SELLING DEALER/RETAILER

OR CALL

SHARP CUSTOMER SERVICES

TELEPHONE: 09 573 0111

FACSIMILE: 09 573 0113

SHARP CORPORATION OF NEW ZEALAND LIMITED

SHARP

WARRANTY

Consumer Electronic Products

Congratulations on Your Purchase!

This Sharp product is warranted against faults in materials and manufacture for a period of twelve (12) months from the date of original purchase.

If service is required during the warranty period, please contact your nearest Sharp Approved Service Centre. These repairs would be carried out at no charge to the owner, subject to the conditions specified herein.

The owner is responsible for any transportation and insurance costs if the product has to be returned for repair.

This warranty does not extend to accessories or defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim.

This warranty is in addition to and in no way limits, varies or excludes any express and implied rights and remedies under any relevant legislation in the country of sale.

IMPORTANT DO NOT RETURN THIS DOCUMENT TO SHARP

For your reference, please enter the particulars of your purchase below and retain, with your purchase documentation.

Model No. _____

Serial No. _____

Date of Purchase _____

Retailer _____

SHARP
SHARP CORPORATION OF AUSTRALIA PTY. LIMITED
ABN 40 003 039 405
1 Huntingwood Drive
Huntingwood NSW2148
SHARP CORPORATION OF NEW ZEALAND LIMITED
59 Hugo Johnston Drive
Penrose, Auckland
SPform030 (JUNE 2004)

IMPORTANT NOTICE: This warranty applies only to products sold in Australia & New Zealand

SHARP®

SHARP CORPORATION

Printed in Malaysia
TINS-F359WJZZ △
11P11-MA-NG