

BUSH

PERSONAL DAB+ DIGITAL RADIO
WITH SPEAKER
POCKET

USER MANUAL

Safety Instructions:

1. Do not use this radio near water.
2. Clean with a dry cloth.
3. Do not block any ventilation openings.
4. Do not use near hot objects or appliances.
5. Use accessories provided by manufacturer.
6. Unload the battery when the unit has not been used for long time.
7. Do not allow this unit to be exposed to water, steam, sand or other environmental hazards.
8. Do not leave your radio where excessive heat could cause damage such as expose to direct sunlight in a parked car where the heat from

the sun can easily build up to extreme levels and damage the unit.

Specifications:

Model: POCKET

Radio: Digital DAB+ & FM Radio

Dimension: 89x52x17mm

Weight(Net): Approx. 75g (Including battery)

FM Frequency: 87.5-108MHz with RDS

DAB+ Frequency: Band III (174.0-239.0MHz)

Headphones: 32 ohm, in-ear style

Output Power: 0.3W(Speaker), 5mW


(headphone)

Power Source: Micro USB (5V,0.6A)

Charging Time: Approx. 2.5 Hours

Usage Time: Approx. 6 Hours(Speaker), 8
Hours(headphone)

Approvals: CE, RoHS, C-tick

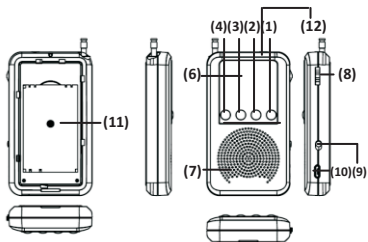

- (1) Power / DAB+ or FM Mode Switch
- (2) Volume Up (3) Volume Down
- (4) Preset (5) Telescopic Antenna
- (6) Color LCD Display (7) Speaker
- (8) Scan Scroll Wheel (9) Key Lock/Unlock
- (10) Micro USB Socket (11) Li Battery Compartment
- (12) Earphone Jack

Charging the radio:

The POCKET features a 3.7V, 1000mAh rechargeable Lithium battery.

The POCKET is supplied with one 'USB to micro-USB' cable for power charging.

Before first time to operate, please fully charge the battery.

1. Open battery cover and insert the Lithium rechargeable battery.
2. Plug the micro USB into the socket(on the right side of the radio), connect the other end USB to power supply such as USB port of computer or USB power adaptors.

3. The radio will begin charging the battery. It will take approximately 2.5 hours to fully charge the battery.
4. The charging icon will flash during charging and stop charging when the radio is fully charged.

Speaker:

The POCKET features a high-quality 8 Ω 0.3W speaker.

Headphones:

The POCKET features a pair of high-quality

earpieces which also act as radio antenna. The 3.5mm jack is located on the top of the radio, it is provided for use with stereo headphones or earpieces.

Important:

Excessive volume from earpieces or headphone may cause damage to your ears.

Operating your radio:

1. Make sure the battery is charged.
2. Press and hold the “POWER/MODE” button to turn on the radio.

3. The display will show the BUSH logo and then enter DAB mode (FM mode if you selected FM before turning off), “DAB” logo will be shown on the middle top of the display in DAB mode whereas “FM” logo will be shown in FM mode.
4. Adjust the volume to comfortable level (Volume Level: 0-20).

DAB+/FM Band Select:

1. Press “POWER/MODE” button to select DAB+ or FM mode, you will see the icon “DAB” or “FM” on middle top of the display.

2. When you turn off the radio, mode will be memorized.

Search and select channels: DAB+ mode

1. Make sure the radio is in DAB+ mode.
2. Press and hold “SCAN” Scroll Wheel button, the radio will scan and memorize all the channels automatically. (Cancel auto-scan by pressing the Scroll Wheel button)
3. Select channel by scrolling up and down the “SCAN” Scrolling Wheel button, then press the “SCAN” Scrolling Wheel button to confirm.
4. All the channels being scanned will be

memorized until another scan is performed.

Service Information: DAB+ mode

The Service Information display - Technical information on the current status of the station being broadcasted.

While listening to DAB+, the display will show the followings if applicable

1. Program type
2. Multiplex Name
3. Time
4. Channel Name
5. Frequency
6. Volume level

7. Signal Strength

Presets: DAB+ mode

1. Make sure you are in DAB+ mode.
2. When you are listening the DAB+ station you would like to preset, press and hold the “PRESET” button for 3 seconds, a list with heading “MEMORY” will show on the display, you will see vacant 1, vacant 2...etc in the list. Select vacant station by scrolling up and down the “SCAN” Scrolling Wheel button and then press the “SCAN” Scrolling Wheel button to confirm.

(If the preset space is occupied, the original

preset station will be overwritten.)

3. To play the preset stations, press once the “PRESET” button and select the preset station(the name of channel will be displayed) by scrolling up and down the “SCAN” Scrolling Wheel button, then press the “SCAN” Scrolling Wheel button to confirm.
4. Max. 20 preset stations for DAB+ radio mode.

Search and select channels : FM

mode(auto-memorized)

1. Make sure the radio is in FM mode.
2. Press and hold “SCAN” Scroll Wheel button,

the radio will scan all the channels automatically. (Cancel auto-scan by pressing once the “SCAN” Scroll Wheel button)

3. All the channels will be memorized.
4. Select channel by scrolling up and down the “SCAN” Scrolling Wheel button.
5. Press and hold “SCAN” Scroll Wheel button to exit.

Manual tuning: FM mode

1. Make sure the radio is in FM mode.
2. Scroll up the “SCAN” Scrolling Wheel button to higher frequency, vice versa.

3. Scroll up and hold the “SCAN” Scrolling Wheel button to scan the next channel at higher frequency, vice versa.

Service Information: FM mode

While listening to FM radio, the display will show the followings if applicable

1. Program type
2. Frequency
3. Channel Name
4. Volume level
5. Signal Strength

Presets: FM mode

1. Make sure you are in FM mode.
2. When you are listening the FM station you would like to preset, press and hold the “PRESET” button for 3 seconds, a list with heading “MEMORY” will show on the display, you will see vacant 1, vacant 2...etc in the list. Select vacant station by scrolling up and down the “SCAN” Scrolling Wheel button and then press the “SCAN” Scrolling Wheel button to confirm.

(If the preset space is occupied, the original preset station will be overwritten.)

3. To play the preset stations, press once the “PRESET” button and select the preset station(the name of channel will be displayed) by scrolling up and down the “SCAN” Scrolling Wheel button, then press the “SCAN” Scrolling Wheel button to confirm.
4. Max. 20 preset stations for FM radio mode.

Radio Antenna:

1. For DAB+ and FM reception there is a built-in telescopic antenna at the rear of the unit.
2. Extend the antenna and move it around to obtain the best reception.

3. Headphone or earpieces as antenna when you plug in 3.5mm jack.

Sleep mode:

1. Press and hold both “SCAN” Scroll Wheel button and “Vol-“ button for 2 secs to enter sleep mode, you will see ‘0 min.’ flashing in red color.
2. Scroll up and down to select the duration from 5 min. to 90 min. (Select ‘0min’ to exit the sleep mode or wait for 5secs to exit sleep mode automatically.)
3. Press “SCAN” Scroll Wheel button again to

confirm, you will see the selected duration in red color on the top of the display.

4. Press and hold both “SCAN” Scroll Wheel button and “Vol-“ button for 2 secs to cancel the sleep mode.

Key Lock Function:

1. Key lock switch is located at the right-hand side of the radio. When the key lock switch is set to “LOCK>” position, “Vol+”, “Vol-“ and “POWER/BAND” buttons will be disabled. Display will show a “lock icon” on the top of the display.

2. To switch off the key lock function, switch the key lock button to off position. The key lock function will be disabled.

Select Background Color:

1. Set the key lock switch to “LOCK>” position.
2. Press and hold both “Vol-” button and “SCAN” Scroll Wheel button for 2 seconds, color background options will be shown on the screen.
3. Select the background color by scrolling up and down the “SCAN” Scrolling Wheel button and then press the “SCAN” Scrolling Wheel button to confirm.

Power Off and Maintenance:

1. Please shut down the power when not in use.
2. Please do not wipe it with rough materials.
3. Remove the battery from the product if it is not going to be used for a long period of time.
4. Please do not attempt to open product or change inner parameter.

*Information of this user manual is subject to change without prior notice.



For more information and support visit:

www.bushaustralia.com.au

BUSH Australia Pty Ltd

YOUR WARRANTY

For any Warranty Enquires, please call:

1300 055 518

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.